


Quick User Guide For Standard Infrared Blackbody


Product Quick Start

1. Quick Start

Connect the blackbody to 220 V power supply via power interface of power switch, turn on the power switch (push the button of the power supply to the open position), the power indicator light is on, the display screen shows the default temperature 35.0 degrees, wait 5minutes when blackbody is stable, then can be used normally.

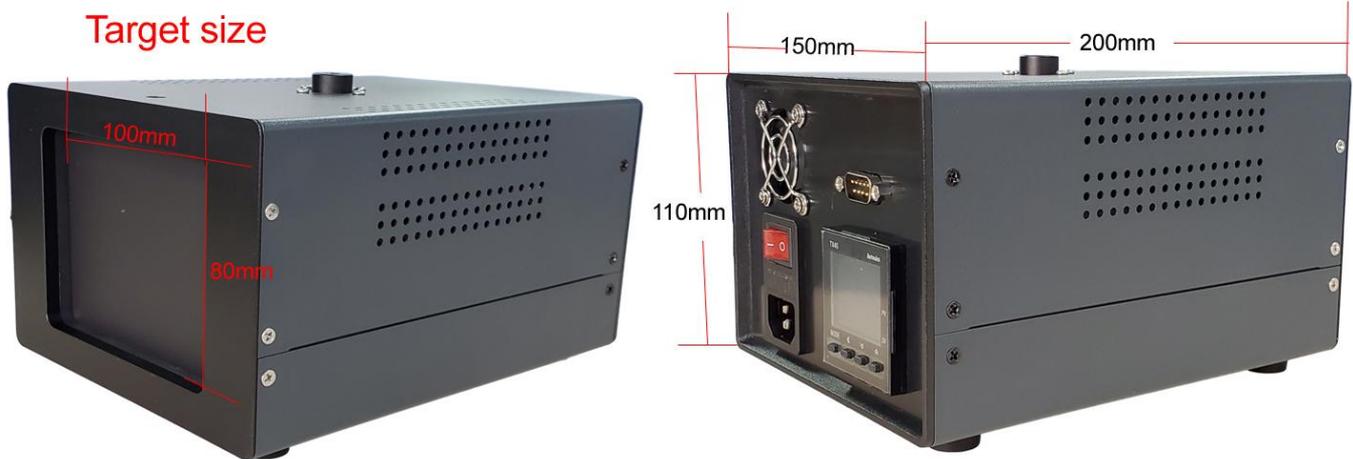

2. Interface Description

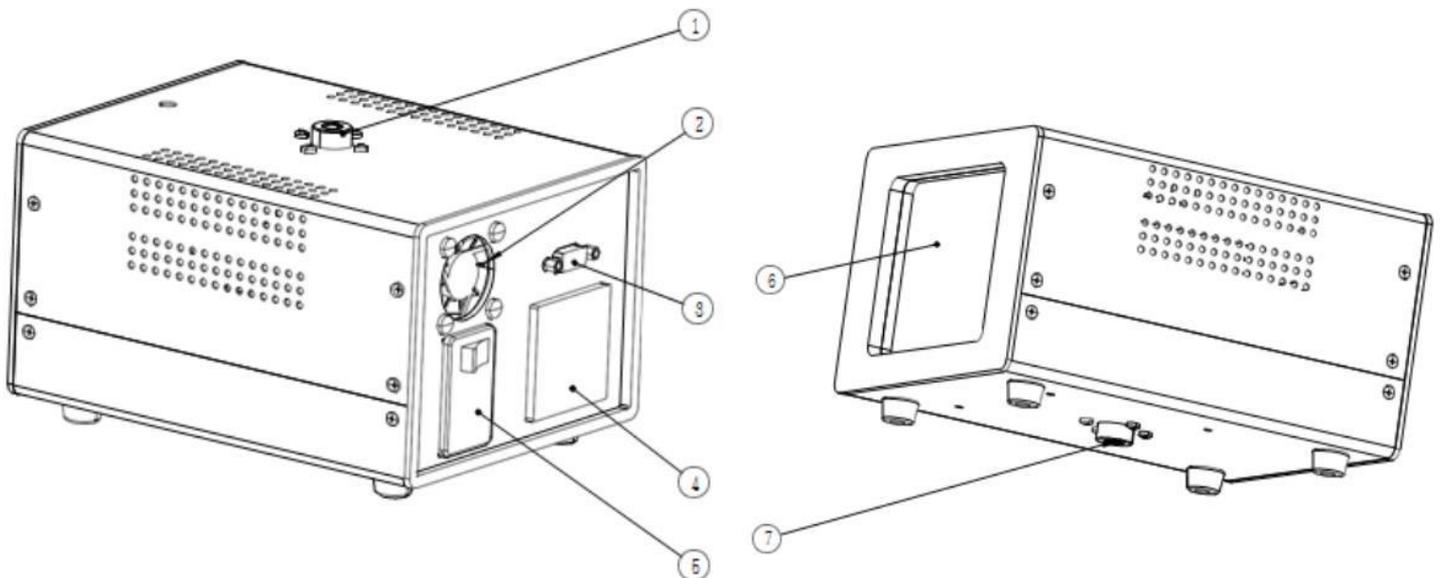


NO.	Name	Specification
1	Upper port	1/4—200NC
2	Cooling fan	DC brushless
3	Communication Interface	spare
4	Control panel	/
5	Power	AC 100-220V/10A
6	Target surface	100*80mm
7	Lower port	1/4—200NC

Note:

1. Please ensure correct power input.
2. Please don't touch the heating area of black body at will to prevent burns.
3. The product is best used at room temperature about 25 degrees to ensure equipment accuracy.
4. Avoid use in a damp environment that exceeds the operating temperature, so as not to affect the accuracy of the equipment.

Packing list:

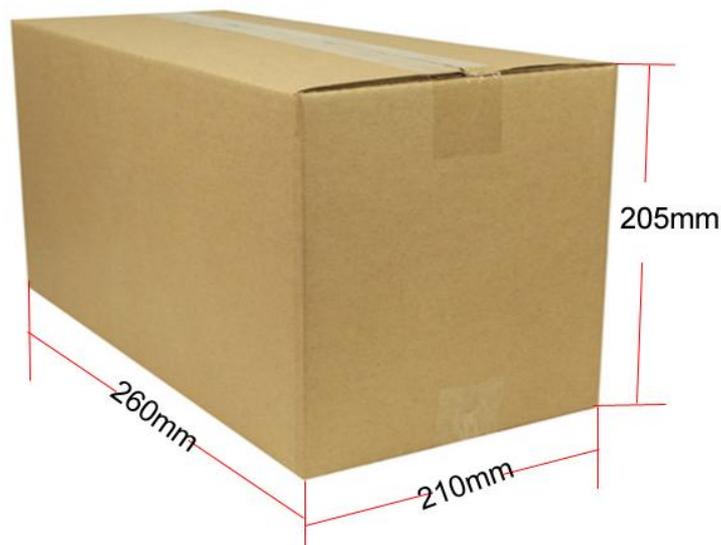

G.W.: 2.7kg
N.W.: 2.0kg

Service:

The shelf life of this product is 1 year, within 1 year non-human damage, BOVI provides free repair serv.