



IPC HTTP CGI 指令说明书

网络摄像机 HTTP CGI 说明书

IP Camera HTTP CGI Specifications

VER. 1.0.10

修改记录

Revise Record

版本 VER.	日期 Date	描述 Description
1.0.0	2017 年 12 月 12 日 Dec. 8, 2017	创建 IPC HTTP CGI 说明书 ver1.0.0 Create the IPC HTTP CGI specification ver1.0.0
1.0.1	2019 年 2 月 26 日 Feb. 26,2019	添加移动侦测 GET 和 SET 的 CGI 接口 Add CGI interface for motion detection of GET and SET
1.0.2	2019 年 9 月 27 日 Set. 27,2019	增加 1、用户管理 API, 2、获取设备型号 API, 3、恢复出厂, 保留网络配置 API, 4、设备升级功能, 5、截图保存功能 API。 Add 1, user management API, 2, acquisition of device model API, 3, restore the factory, retain network configuration API, 4, equipment upgrade function, 5, screenshot preservation API.
1.0.3	2019 年 11 月 11 日 Nov. 11,2019	增加获取录像文件的 CGI 接口。 Added CGI interface for obtaining video files.
1.0.4	2019 年 12 月 10 日 Dec. 10,2019	增加获取 RTMP 配置和设置的接口。 Added interface to get RTMP configuration and settings.
1.0.5	2020 年 1 月 16 日 Jan.16,2020	增加摄像机设置的参数，一些服务的状态。 Increase the parameters set by the camera and the status of some services.
1.0.6	2020 年 3 月 27 日 Mar.27.2020	增加 HTTPS 证书上传和私钥上传的接口 Add interfaces for HTTPS certificate upload and private key upload
1.0.8	2020 年 9 月 27 日 Sep.27.2020	添加自定义 OSD 接口 Add UserOSD interface
1.0.9	2020 年 11 月 16 日 Nov.27.2020	支持 CGI 设置 50/60Hz, CGI 控制日夜模式转换, CGI 控制开关灯, CGI 可控制端口开关 Support CGI setting 50/60Hz, CGI control day and night mode conversion, CGI control switch light, CGI control port switch
1.0.10	2022 年 4 月 27 日 April.27.2022	支持 URL 跳过登录界面, CGI 设置 UID 有效时间, CGI 手动触发 io 输入告警, cgi 设置 onvif 配置, cgi 设置 rtsp 配置, cgi 获取继电器位置状态, cgi 设置继电器位置状态, cgi 设置手动快门速度, cgi 设置 OEM 型号 Support URL skip login interface, CGI set UID valid time, CGI manually trigger io input alarm, cgi set onvif configuration, cgi set rtsp configuration, cgi get relay position status, cgi set relay position status, cgi set manual shutter speed, cgi set OEM model



目录

Index

1. The format of the HTTP request and response	7
2. CGI 接口列表	7
2. The interface list	7
3. 接口说明	9
3. Interface specification	9
3.1 获取 user id	9
3.1 Get user id	9
3.2 心跳	10
3.2 Keep alive	10
3.3 获取设备信息	11
3.3 Version information	11
3.4 能力集	12
3.4 Get capabilities	12
3.5 重启	13
3.5 Reboot	13
3.6 恢复出厂设置	13
3.6 Restore default Settings	13
3.7 网络配置	14
3.7 Network Configuration	14
3.8 时间	15
3.8 Time	15
3.9 视频编码能力集	18
3.9 Video encoding capabilities	18
3.10 视频编码配置	19
3.10 Video encoding configuration	19
3.11 音频编码能力集	21
3.11 Audio encoding capabilities	21
3.12 音频编码配置	22
3.12 Audio encoding configuration	22
3.13 OSD	24
3.13 OSD	24
3.14 图像	28
3.14 Image	28
3.15 PTZ 控制	29
3.15 PTZ	29
3.16 移动侦测配置	31
3.16 Motion Detect configuration	31
3.17 获取设备型号 (OEM)	33
3.17 Obtain Equipment Model	33
3.18 用户管理	34
3.18 User Management	34

3.19 抓图上传	37
3.19 snapshot upload	37
3.20 获取录像文件路径	39
3.20 Get the video file path	39
3.21 固件升级	43
3.21 Upgrade Firmware	43
3.22 RTMP 配置	44
3.22 RTMP Configuration	44
3.23 本地录像存储配置	46
3.23 ScheduleStorage Configuration	46
3.24 移动侦测录像配置	49
3.24 EventStorage Configuration	49
3.25 获取设备状态 (OEM)	51
3.25 Get device status	51
3.26 触发 IO 报警开关	52
3.26 Trigger IO alarm switch	52
3.27 宽动态模式范围开关设置	53
3.27 WDR Switch settings	53
3.28 降噪开关设置	54
3.28 noise reduction Switch settings	54
3.29 编码码流开关设置	55
3.29 Encoding code stream switch setting	55
3.30 红外灯以及亮度开关设置	56
3.30 Infrared light and brightness switch settings	56
3.31 服务端口开关 API	57
3.31 Service port switch API	57
3.32 设置隐私区域 API	59
3.32 Service Set privacy zone API	59
3.33 图像翻转设置	60
3.33 set flip settings	60
3.34 https 证书和私钥上传	61
3.34 https Certificate and private key upload	61
3.35 自定义 OSD	62
3.35 UserOSD	62
3.36 灯光控制	64
3.36 Led Control	64
3.37 IRCUT 控制	65
3.37 IRCUT Control	65
3.38 URL skip the login	66
3.38 URL 跳过登录界面	66
3.39 Set UID valid time	67
3.39 设定 UID 有效时间	67
3.40 手动触发 io 输入告警	67
3.41 onvif authentication settings	68

3.41 onvif 认证设置	68
3.42 rtsp authentication settings	69
3.42 rtsp 认证设置	69
3.43 Get the position status of the relay	69
3.43 获取继电器的位置状态	69
3.44 Set the position state of the relay	70
3.44 设置继电器的位置状态	70
3.44 Set manual shutter speed	71
3.44 设置手动快门速度	71
3.45 Set device OEM model	72
3.45 设置设备 OEM 型号	72
4. 使用 XMLHttpRequest 调用 WEB 服务器的 CGI 程序	76
4. Using XMLHttpRequest to call CGI program of web server	77

1. HTTP 请求与响应的格式

1. The format of the HTTP request and response

1) HTTP GET 请求，把请求的内容填充在 HTTP URL 中。

1) To request with HTTP GET, write the contents of the request in the HTTP URL.

2) 如果?之后不带配置参数则是查询配置，返回当前配置信息；如果?之后带配置参数则是设置，设置成功之后返回生效的配置参数。

例如 查询配置 /cgi-bin/network?uid=XXXXXXXXXX

 设置配置 /cgi-bin/network?dhcp=0&uid=XXXXXXXXXX

2) If there is no configuration parameter behind the question mark, it is the query configuration to return the current configuration information;If the configuration parameter behind the question mark is set, the configuration parameter returned to take effect after the success is set.

For example

Query configuration /cgi-bin/network?uid=XXXXXXXXXX

Set the configuration /cgi-bin/network?dhcp=0&uid=XXXXXXXXXX

3) 请求失败时在响应的报文中返回错误的原因，格式为：

```
<?xml version="1.0" encoding="UTF-8"?>
<fault>
<value>describe the value</value>
<reason>describe the reason</reason>
</fault>
```

3) The cause of the error returned in the response message when the request failed. Message format for example

```
<?xml version="1.0" encoding="UTF-8"?>
<fault>
<value>describe the value</value>
<reason>describe the reason</reason>
</fault>
```

2. CGI 接口列表

2. The interface list

序号 No.	请求的 URL The requested URL	描述 Description
1	/cgi-bin/getuid?username=xxxx&password=xxxx	获取 user id Request user id
2	/cgi-bin/keep_alive?uid=XXXXXXXXXX	心跳 Keep alive
3	/cgi-bin/getinfo?uid=XXXXXXXXXX	设备信息 Version information

4	/cgi-bin/getcapabilities?uid=XXXXXXXXXX	能力集 capabilities
5	/cgi-bin/reboot?uid=XXXXXXXXXX	重启 reboot
6	/cgi-bin/factory_reset?uid=XXXXXXXXXX	恢复出厂设置 Restore default Settings
7	/cgi-bin/network?uid=XXXXXXXXXX	网络配置 network
8	/cgi-bin/time?uid=XXXXXXXXXX	时间 time
9	/cgi-bin/videoencoder/getcapabilities?uid=XXXXXXXXXX	视频编码能力集 Video encoding capabilities
10	/cgi-bin/videoencoder?uid=XXXXXXXXXX	视频编码配置 Video encoding configuration
11	/cgi-bin/audioencoder/getcapabilities?uid=XXXXXXXXXX	音频编码能力集 Audio encoding capabilities
12	/cgi-bin/audioencoder?uid=XXXXXXXXXX	音频编码配置 Audio encoding configuration
13	/cgi-bin/osd?uid=XXXXXXXXXX	OSD
14	/cgi-bin/image?uid=XXXXXXXXXX	图像 image
15	/cgi-bin/ptz_ctrl?stop=1&uid=XXXXXXXXXX	云台控制 PTZ
16	/cgi-bin/motion?uid=XXXXXXXXXX	移动侦测 Motion
17	/cgi-bin/getmodel?uid=XXXXXXXXXX	获取设备型号 Model
18	/cgi-bin/user_management?uid=XXXXXXX	用户管理 User Management
19	/cgi-bin/snapshot.cgi?uid=XXXXXXXXXX	抓图上传 snapshot upload
20	POST /cgi-bin/OnvifFirmwareUpgrade HTTP/1.1	固件升级 Upgrade Firmware
21		

3. 接口说明

3. Interface specification

首先需要使用/cgi-bin/getuid 接口获取 user id，其他接口都需要验证 user id。User id 60 秒超时，失效之后需要重新请求 user id。每次成功请求 cgi 接口之后重新计算超时时间，如果长时间没有请求但又希望 user id 不失效，可以使用/cgi-bin/keep_alive 接口保持心跳。

First you need to get the user id using the /cgi-bin/getuid interface. The other interfaces need to authenticate the user id. User id timeout for 60 seconds, user id needs to be requested again after expiration. After each successful request cgi interface to recalculate the timeout, if there is no request for a long time and hope user id does not expire, you can use the /cgi-bin/keep_alive interface to keep the heartbeat.

3.1 获取 user id

3.1 Get user id

/cgi-bin/getuid?username=xxxx&password=xxxx

参数名称 Parameter name	参数值 Parameter value	描述 Description
username	字母和数字 Letters and Numbers	IPC 用户名 IPC username
password	字母和数字 Letters and Numbers	IPC 密码 IPC password

响应的报文

Response message

状态码 Status code	内容 Content	描述 Description
200	<?xml version="1.0" encoding="UTF-8"?> <uid>XXXXXXXX</uid>	请求成功， uid 是 XXXXXXXX The request was successful, uid is XXXXXXXX
400	<?xml version="1.0" encoding="UTF-8"?> <fault> <value>/cgi-bin/getuid</value> <reason>error, parse parameters</reason> </fault>	获取参数失败 Failed to get parameters
400	<?xml version="1.0" encoding="UTF-8"?> <fault> <value>/cgi-bin/getuid</value> <reason>error, parse username</reason> </fault>	获取用户名失败 Failed to get username

400	<?xml version="1.0" encoding="UTF-8"?> <fault> <value>/cgi-bin/getuid</value> <reason>error, parse password</reason> </fault>	获取密码失败 Failed to get password
400	<?xml version="1.0" encoding="UTF-8"?> <fault> <value>/cgi-bin/getuid</value> <reason>password error</reason> </fault>	密码错误 Wrong password

3.2 心跳

3.2 Keep alive

/cgi-bin/keep_alive?uid=XXXXXXXXX

参数名称 Parameter name	参数值 Parameter value	描述 Description
uid		会话的用户 id, 通过/cgi-bin/getuid 接口得到的 id User id for the session. The id passed through the /cgi-bin/getuid interface.

响应的报文

Response message

状态码 Status code	内容 Content	描述 Description
200	<?xml version="1.0" encoding="UTF-8"?> <keep_alive>true</keep_alive>	请求成功 The request was successful
400	<?xml version="1.0" encoding="UTF-8"?> <fault> <value>/cgi-bin/keep_alive</value> <reason>error, parse parameters</reason> </fault>	获取参数失败 (此响应消息在其他 CGI 接口请求出错时也可能出现, 下文不做重复解释) Failed to get parameters (This response message may also appear in the request of other CGI interface error, the following will not be repeated explanation)
400	<?xml version="1.0" encoding="UTF-8"?> <fault>	获取 uid 失败 (此响应消息在其他 CGI 接口请

	<value>/cgi-bin/keep_alive</value> <reason>error, parse uid</reason> </fault>	求出错时也可能出现, 下文不做重 复解释) Failed to get uid (This response message may also appear in the request of other CGI interface error, the following will not be repeated explanation)
400	<?xml version="1.0" encoding="UTF-8"?> <fault> <value>/cgi-bin/keep_alive</value> <reason>uid error</reason> </fault>	uid 错误或者已经超时失效 (此响应消息在其他 CGI 接口请 求出错时也可能出现, 下文不做重 复解释) uid error or invalid timeout (This response message may also appear in the request of other CGI interface error, the following will not be repeated explanation)

3.3 获取设备信息

3.3 Version information

/cgi-bin/getinfo?
/cgi-bin/getinfo?uid=XXXXXXXX

说明: getinfo 没有加入用户名或者密码认证的时候, 可以输出 OEM 的信息和 MAC 地址, 如果加上认证之后, 可以获取设备的所有信息。

Note: When getinfo is not added with user name or password authentication, it can output OEM information and MAC address. If authentication is added, all information of the device can be obtained.

参数名称 Parameter name	参数值 Parameter value	描述 Description
uid		会话的用户 id, 通过/cgi-bin/getuid 接口得到的 id User id for the session. The id passed through the /cgi-bin/getuid interface.

响应的报文

Response message

状态码 Status code	内容 Content	描述 Description

200	<?xml version="1.0" encoding="UTF-8"?> <info oem="MC400L" mac_address="F0:00:00:29:06:9F"/>	请求成功。参数的值是： oem: 设备型号 mac_address: MAC 物理地址 The request was successful. The value of the parameter is: oem: device model mac_address: MAC physical address
200	<?xml version="1.0" encoding="UTF-8"?> <info kernel="Linux 3.18.30 #15 PREEMPT Fri Mar 30 15:27:46 CST 2018 armv7l" filesystem="MC400L" sn="EF0000000029069F" oem="MC400L" mac_address="F0:00:00:29:06:9F"/>	请求成功。参数的值是： kernel: 内核版本 filesystem: 文件系统版本 sn: 产品序列号 The request was successful. The value of the parameter is: kernel: Kernel version filesystem: File system version sn: Product serial number

3.4 能力集

3.4 Get capabilities

/cgi-bin/getcapabilities?uid=XXXXXXXXXX

参数名称 Parameter name	参数值 Parameter value	描述 Description
uid		会话的用户 id, 通过/cgi-bin/getuid 接口得到的 id User id for the session. The id passed through the /cgi-bin/getuid interface.

响应的报文

Response message

状态码 Status code	内容 Content	描述 Description
200	<?xml version="1.0" encoding="UTF-8"?> <capabilities video="1" audio="1" ptz="0"/>	请求成功。参数的值 1 支持, 0 不支持。 video: 是否支持视频 audio: 是否支持音频 ptz: 是否支持云台控制 The request was successful. The value of parameter 1 is supported, 0 is not supported.

		video: Whether to support video audio: Whether to support audio ptz: Whether to support PTZ
--	--	---

3.5 重启

3.5 Reboot

/cgi-bin/reboot?uid=XXXXXXXX

参数名称 Parameter name	参数值 Parameter value	描述 Description
uid		会话的用户 id, 通过/cgi-bin/getuid 接口得到的 id User id for the session. The id passed through the /cgi-bin/getuid interface.

响应的报文

Response message

状态码 Status code	内容 Content	描述 Description
200	<?xml version="1.0" encoding="UTF-8"?> <reboot>true</reboot>	请求成功 The request was successful.

3.6 恢复出厂设置

3.6 Restore default Settings

/cgi-bin/factory_reset?uid=XXXXXXXX

/cgi-bin/factory_reset?retain_network=1&uid=XXXXXXXX

参数名称 Parameter name	参数值 Parameter value	描述 Description
uid		会话的用户 id, 通过/cgi-bin/getuid 接口得到的 id User id for the session. The id passed through the /cgi-bin/getuid interface.
retain_network	数字 1 Number 1	1: 表示恢复出厂会保留设备的网络配置。 1: Represents that restoring the factory will retain the network configuration of the device.

响应的报文

Response message

状态码 Status code	内容 Content	描述 Description
200	<?xml version="1.0" encoding="UTF-8"?> <factory_reset>true</factory_reset>	请求成功 The request was successful.
400	<?xml version="1.0" encoding="UTF-8"?> <fault> <value>/cgi-bin/factory_reset</value> <reason>retain_network 0 or 1</reason> </fault>	获取参数失败 retain_network 参数只能是 1, 是其余的参数出错。 The retain network parameter can only be 1. The rest of the parameters are wrong.
400	<?xml version="1.0" encoding="UTF-8"?> <fault> <value>/cgi-bin/factory_reset</value> <reason>retain_network: NULL</reason> </fault>	获取参数失败 retain_network 参数为空的时候, 上报错误。 When the retain_network parameter is empty, an error is reported.

3.7 网络配置

3.7 Network Configuration

/cgi-bin/network?uid=XXXXXXXX
/cgi-bin/network?dhcp=0&uid=XXXXXXXX
/cgi-bin/network?ipaddr=192.168.4.65&netmask=255.255.255.0&gateway=192.168.4.1&uid=XX
XXXXXX
/cgi-bin/network?dns1=114.114.114.114&dns2=8.8.8.8&uid=XXXXXXXX
/cgi-bin/network?port=80&uid=XXXXXXXX

参数名称 Parameter name	参数值 Parameter value	描述 Description
uid		会话的用户 id, 通过/cgi-bin/getuid 接口得到的 id User id for the session. The id passed through the /cgi-bin/getuid interface.
dhcp	选项(Option): 1 0	1 启用 DHCP, 0 禁用 DHCP 1 Enable DHCP, 0 Disable DHCP
ipaddr		IP 地址 IP address
netmask		子网掩码 Subnet mask
gateway		网关地址 Gateway address
dns1		首选 DNS Preferred DNS
dns2		备用 DNS

		Standby DNS
port	数字 80 或从 1000 至 65535 Numbers 80 or from 1000 to 65535	端口 Server port

响应的报文

Response message

状态码 Status code	内容 Content	描述 Description
200	<?xml version="1.0" encoding="UTF-8"?> <network macaddr="XX-XX-XX-XX-XX-XX" dhcp="0" ipaddr="192.168.0.10" netmask="255.255.255.0" gateway="192.168.0.1" dns1="114.114.114.114" dns2="8.8.8.8" port="80"/>	请求成功。参数的值是： macaddr: MAC 地址 dhcp: 1 启用 DHCP, 0 禁用 DHCP ipaddr: IP 地址 netmask: 子网掩码 gateway: 网关地址 dns1: 首先 DNS dns2: 备用 DNS port: 端口 The request was successful. The value of the parameter is: macaddr: MAC address dhcp: 1 Enable DHCP, 0 Disable DHCP ipaddr: IP address netmask: Subnet mask gateway: Gateway address dns1: Preferred DNS dns2: Standby DNS port: Server port
400	<?xml version="1.0" encoding="UTF-8"?> <fault> <value>/cgi-bin/network</value> <reason>dhcp: 0 or 1</reason> </fault>	参数 dhcp 错误 (其他参数的错误提示类似, 不重 复解释) Parameter dhcp error (Other parameters similar to the wrong tips do not repeat the explanation)

3.8 时间

3.8 Time

```
/cgi-bin/time?uid=XXXXXXXXX
/cgi-bin/time?timezone=GMT+08:00&uid=XXXXXXXXX
/cgi-bin/time?update_method=MANUAL&year=2017&month=11&day=30&hour=8&min=0&sec=0&uid=XXXXXXXXX
/cgi-bin/time?update_method=ntp&ntpaddr=pool.ntp.org&port=123&uid=XXXXXXXXX
/cgi-bin/time?update_method=ntp&ntpaddr=pool.ntp.org&port=123&update_period=60&uid=XXXXXX
XXXXXX
```

参数名称 Parameter name	参数值 Parameter value	描述 Description
uid		会话的用户 id, 通过/cgi-bin/getuid 接口得到的 id User id for the session. The id passed through the /cgi-bin/getuid interface.
timezone	选项(Option): GMT+00:00 GMT+01:00 GMT+02:00 GMT+03:00 GMT+03:30 GMT+04:00 GMT+04:30 GMT+05:00 GMT+05:30 GMT+05:45 GMT+06:00 GMT+06:30 GMT+07:00 GMT+08:00 GMT+09:00 GMT+09:30 GMT+10:00 GMT+11:00 GMT+12:00 GMT+13:00 GMT-01:00 GMT-02:00 GMT-03:00 GMT-03:30 GMT-04:00 GMT-04:30 GMT-05:00 GMT-06:00 GMT-07:00	时区 Time zone

	GMT-08:00 GMT-09:00 GMT-10:00 GMT-11:00 GMT-12:00	
update_method	选项(Option): MANUAL NTP P2P	更新方式 Update method
year	数字 Numbers	年 year
month	数字 Numbers	月份 month
day	数字 Numbers	日期 day
hour	数字 Numbers	小时 hour
min	数字 Numbers	分钟 minute
sec	数字 Numbers	秒钟 Seconds
ntpaddr		NTP 服务器地址 NTP server address
port	数字 80 或从 1000 至 65535 Numbers 80 or from 1000 to 65535	NTP 服务器端口 NTP server port
update_period	数字从 60 至 999999 Numbers from 60 to 999999	ntp 同步间隔, 间隔时间以秒为单位 ntp synchronization interval, interval time is in seconds

响应的报文

Response message

状态码 Status code	内容 Content	描述 Description
200	<?xml version="1.0" encoding="UTF-8"?> <time timezone="GMT+08:00" update_method="ntp" ntpaddr="pool.ntp.org" port="123" current_time="2017-11-30 08:00:00"/>	请求成功。参数的值是: timezone: 时区 update_method: 更新方式 ntpaddr: NTP 服务器地址 port: NTP 服务器端口 current_time: 当前时间

		The request was successful. The value of the parameter is: timezone: Time zone update_method: Update method ntpaddr: NTP server address port: NTP server port current_time: Current time
400	<?xml version="1.0" encoding="UTF-8"?> <fault> <value>/cgi-bin/time</value> <reason>timezone error</reason> </fault>	参数 timezone 错误 (其他参数的错误提示类似, 不重复解释) Parameter timezone error (Other parameters similar to the wrong tips do not repeat the explanation)

3.9 视频编码能力集

3.9 Video encoding capabilities

/cgi-bin/videoencoder/getcapabilities?uid=XXXXXXXX

参数名称 Parameter name	参数值 Parameter value	描述 Description
uid		会话的用户 id, 通过/cgi-bin/getuid 接口得到的 id User id for the session. The id passed through the /cgi-bin/getuid interface.

响应的报文

Response message

状态码 Status code	内容 Content	描述 Description
200	<?xml version="1.0" encoding="UTF-8"?> <video_capabilities> <stream1> <encode_mode name="H264"> <resolution name="2592X1944"> <framerate_range>1-15</framerate_range> <bitrate_range>500-8000</bitrate_range> </resolution> <resolution name="1080P"> <framerate_range>1-30</framerate_range> <bitrate_range>500-6000</bitrate_range> </encode_mode> <stream2> <encode_mode name="H264"> <resolution name="1080P"> <framerate_range>1-30</framerate_range> <bitrate_range>500-6000</bitrate_range> </resolution> <resolution name="720P"> <framerate_range>1-30</framerate_range> <bitrate_range>500-6000</bitrate_range> </resolution> </encode_mode> </stream2> </video_capabilities>	请求成功。参数的值是: stream1: 主码流 stream2: 子码流 encode_mode: 编码模式 resolution: 分辨率 framerate_range: 帧率范围 bitrate_range: 码率范围 The request was successful. The value of the parameter is: stream1: Main stream

	<pre> </resolution> </encode_mode> <encode_mode name="H265"> <resolution name="2592X1944"> <framerate_range>1-15</framerate_range> <bitrate_range>500-6000</bitrate_range> </resolution> <resolution name="1080P"> <framerate_range>1-30</framerate_range> <bitrate_range>500-4000</bitrate_range> </resolution> </encode_mode> </stream1> <stream2> <encode_mode name="H264"> <resolution name="VGA"> <framerate_range>1-30</framerate_range> <bitrate_range>50-2000</bitrate_range> </resolution> <resolution name="480X360"> <framerate_range>1-30</framerate_range> <bitrate_range>50-2000</bitrate_range> </resolution> </encode_mode> <encode_mode name="H265"> <resolution name="VGA"> <framerate_range>1-30</framerate_range> <bitrate_range>50-2000</bitrate_range> </resolution> <resolution name="480X360"> <framerate_range>1-30</framerate_range> <bitrate_range>50-2000</bitrate_range> </resolution> </encode_mode> </stream2> </video_capabilities></pre>	stream2: Sub stream encode_mode: Encode mode resolution: Resolution framerate_range: Framerate range bitrate_range: Bitrate range
--	---	---

3.10 视频编码配置

3.10 Video encoding configuration

/cgi-bin/videoencoder?uid=XXXXXXXX
 /cgi-bin/videoencoder/stream1?encode_mode=H265&resolution=1080P&framerate=25&govlen
 gth=100&bitrate=2500&bitrate_control=CBR&uid=XXXXXXXX



/cgi-bin/videoencoder/stream2?encode_mode=H265&resolution=480X360&framerate=25&govlength=100&bitrate=200&bitrate_control=CBR&uid=XXXXXXXX
 /cgi-bin/videoencoder/stream3?encode_mode=H265&resolution=CIF&framerate=10&govlength=40&bitrate=100&bitrate_control=CBR&uid=XXXXXXXX

参数名称 Parameter name	参数值 Parameter value	描述 Description
uid		会话的用户 id, 通过/cgi-bin/getuid 接口得到的 id User id for the session. The id passed through the /cgi-bin/getuid interface.
encode_mode		编码模式, 通过/cgi-bin/videoencoder/getcapabilities 接口得到的选项 Encode_mode. Options available through the /cgi-bin/videoencoder/getcapabilities interface
resolution		分辨率, 通过/cgi-bin/videoencoder/getcapabilities 接口得到的选项 Resolution. Options available through the /cgi-bin/videoencoder/getcapabilities interface
framerate		帧率, 通过/cgi-bin/videoencoder/getcapabilities 接口得到的选项 Framerate. Options available through the /cgi-bin/videoencoder/getcapabilities interface
govlength		I 帧间隔 Gov length
bitrate		码率, 通过/cgi-bin/videoencoder/getcapabilities 接口得到的选项 Bitrate. Options available through the /cgi-bin/videoencoder/getcapabilities interface
bitrate_control	选项(Option): CBR VBR	码率控制类型 Bitrate control type
AdvanceEncodeConfig/profile	选项(Option): 0 ~ 1	视频编码配置 Video Encode Profile 0:default 1:baseprofile

响应的报文

Response message

状态码 Status code	内容 Content	描述 Description
200	<?xml version="1.0" encoding="UTF-8"?> <videoencoder>	请求成功。参数的值是: stream1: 主码流

	<pre><stream1 encode_mode="H265" resolution="1080P" framerate="25" govlength="100" bitrate="2500" bitrate_control="CBR"/> <stream2 encode_mode="H265" resolution="480X360" framerate="25" govlength="100" bitrate="200" bitrate_control="CBR"/> </videoencoder></pre>	<p>stream2: 子码流 encode_mode: 编码模式 resolution: 分辨率 framerate_range: 帧率范围 govelength: 1帧间隔 bitrate_range: 码率范围 bitrate_control: 码率控制类型</p> <p>The request was successful. The value of the parameter is: stream1: Main stream stream2: Sub stream encode_mode: Encode mode resolution: Resolution framerate_range: Framerate range govelength: Gov length bitrate_range: Bitrate range bitrate_control: Bitrate control type</p>
400	<pre><?xml version="1.0" encoding="UTF-8"?> <fault> <value>/cgi-bin/videoencoder/stream1</value> <reason>encode_mode error</reason> </fault></pre>	<p>参数 encode_mode 错误 (其他参数的错误提示类似, 不重复解释)</p> <p>Parameter encode_mode error (Other parameters similar to the wrong tips do not repeat the explanation)</p>

3.11 音频编码能力集

3.11 Audio encoding capabilities

/cgi-bin/audioencoder/getcapabilities?uid=XXXXXXXXXX

参数名称 Parameter name	参数值 Parameter value	描述 Description
uid		会话的用户 id, 通过/cgi-bin/getuid 接口得到的 id User id for the session. The id passed through the /cgi-bin/getuid interface.

响应的报文

Response message

状态码 Status	内容 Content	描述 Description
---------------	---------------	-------------------

code		
200	<pre><?xml version="1.0" encoding="UTF-8"?> <audio_capabilities> <encode_type name="G.711"> <samplerate name="8000"> <bitrate>64000</bitrate> </samplerate> </encode_type> <encode_type name="G.711A"> <samplerate name="8000"> <bitrate>64000</bitrate> </samplerate> </encode_type> <encode_type name="AAC"> <samplerate name="16000"> <bitrate>16000</bitrate> </samplerate> </encode_type> </audio_capabilities></pre>	<p>请求成功。参数的值是： encode_type: 编码类型 samplerate: 采样率 bitrate: 比特率</p> <p>The request was successful. The value of the parameter is: encode_type: Encode type samplerate: Samplerate bitrate: Bitrate</p>

3.12 音频编码配置

3.12 Audio encoding configuration

```
/cgi-bin/audioencoder?uid=XXXXXXXXX
/cgi-bin/audioencoder?enable=0&uid=XXXXXXXXX
/cgi-bin/audioencoder?enable=1&uid=XXXXXXXXX
/cgi-bin/audioencoder?enable=1&encode_type=G.711&samplerate=8000&bitrate=64000&uid=X
XXXXXXXX
/cgi-bin/audioencoder?input_volume=60&output_volume=80&amplify=1&uid=XXXXXXXXX
```

参数名称 Parameter name	参数值 Parameter value	描述 Description
uid		会话的用户 id, 通过/cgi-bin/getuid 接口得到的 id User id for the session. The id passed through the /cgi-bin/getuid interface.
enable	选项(Option): 1 0	1 启用音频, 0 禁用音频 1 Enable audio, 0 Disable audio
encode_type		编码类型, 通过/cgi-bin/audioencoder/getcapabilities 接口得到的选项 Encode type. Options available through the /cgi-bin/audioencoder/getcapabilities interface
samplerate		采样率, 通过/cgi-bin/audioencoder/getcapabilities 接口得到的

		选项 Samplerate. Options available through the /cgi-bin/audioencoder/getcapabilities interface
bitrate		比特率, 通过/cgi-bin/audioencoder/getcapabilities 接口得到的选项 Bitrate. Options available through the /cgi-bin/audioencoder/getcapabilities interface
input_volume	数字 1 至 100 Numbers from 1 to 100	输入音量 Input volume
output_volume	数字 1 至 100 Numbers from 1 to 100	输出音量 Output volume
amplify	选项(Option): 1 0	1 启用音频功放, 0 禁用音频功放 1 Enable audio amplifier, 0 Disable audio amplifier

响应的报文

Response message

状态码 Status code	内容 Content	描述 Description
200	<?xml version="1.0" encoding="UTF-8"?> <audioencoder enable="1" encode_type="G.711" samplerate="8000" bitrate="64000" input_volume="60" output_volume="80" amplify="1"/>	<p>请求成功。参数的值是：</p> <p>enable: 启用或禁用音频</p> <p>encode_type: 编码类型</p> <p>samplerate: 采样率</p> <p>bitrate: 比特率</p> <p>input_volume: 输入音量</p> <p>output_volume: 输出音量</p> <p>amplify: 启用或禁用音频功放</p> <p>The request was successful. The value of the parameter is:</p> <p>enable: Enable or disable audio</p> <p>encode_type: Encode type</p> <p>samplerate: Samplerate</p> <p>bitrate: Bitrate</p> <p>input_volume: Input volume</p> <p>output_volume: Output volume</p> <p>amplify: Enable or disable audio amplifier</p>
400	<?xml version="1.0" encoding="UTF-8"?> <fault> <value>/cgi-bin/audioencoder</value> <reason>enable: 0 or 1</reason> </fault>	<p>参数 enable 错误 (其他参数的错误提示类似，不重复解释)</p> <p>Parameter enable error (Other parameters similar to the wrong tips do not repeat the explanation)</p>

3.13 OSD**3.13 OSD**

```
/cgi-bin/osd?uid=XXXXXXXXXX
/cgi-bin/osd?enable=0&uid=XXXXXXXXXX
/cgi-bin/osd?enable=1&uid=XXXXXXXXXX
/cgi-bin/osd?title_utf8=XXXXXXXXXX&uid=XXXXXXXXXX
/cgi-bin/osd?enable=1&color=1&fontsize=1&title_pos_type=1&title_pos_x=1&title_pos_y=0&sh
```

ow_res_bit=0&time_pos_type=1&time_pos_x=1&time_pos_y=0&show_week=1&time_format=yyy-mm-dd hh:mm:ss&title_utf8=XXXXXXXXX&uid=XXXXXXXX

参数名称 Parameter name	参数值 Parameter value	描述 Description
uid		会话的用户 id, 通过/cgi-bin/getuid 接口得到的 id User id for the session. The id passed through the /cgi-bin/getuid interface.
enable	选项(Option): 0 1	1 启用 OSD, 0 禁用 OSD 1 Enable OSD, 0 Disable OSD
color	选项(Option): 0 1 2 3	OSD 颜色, 0 黑色字白色背景, 1 白色字黑色背景, 2 黑字白框透明背景, 3 白字黑框透明背景 OSD color. 0 Black text on white background, 1 White text on black background, 2 Black text white border on transparent background, 3 White text black border on transparent background
fontsize	选项(Option): 0 1 2	字体尺寸, 0 小, 1 中, 2 大 Font size. 0 Small, 1 Medium, 2 Large
title_pos_type	选项(Option): 0 1	标题位置类型, 0 方向, 1 坐标 Title position type. 0 Direction, 1 Coordinate
title_pos_x	数字 Numbers	标题 x 轴位置 , title_pos_type=0 时取值 0 至 2 , title_pos_type=1 时取值 0 至 100 Title x-axis position. Values 0 to 2 for title_pos_type = 0 and 0 to 100 for title_pos_type = 1
title_pos_y	数字 Numbers	标题 y 轴位置 , title_pos_type=0 时取值 0 至 2 , title_pos_type=1 时取值 0 至 100 Title y-axis position. Values 0 to 2 for title_pos_type = 0 and 0 to 100 for title_pos_type = 1
show_res_bit	选项(Option): 0 1 2 3	0 不显示分辨率和码率, 1 显示分辨率不显示码率, 2 显示码率不显示分辨率, 3 显示分辨率和码率 0 does not display resolution and code rate, 1 display resolution does not display code rate, 2 display code rate does not display resolution, 3 display resolution and code rate.
time_pos_type	选项(Option): 0 1	时间位置类型, 0 方向, 1 坐标 Time position type. 0 Direction, 1 Coordinate
time_pos_x	数字 Numbers	时间 x 轴位置 , time_pos_type=0 时取值 0 至 2 , time_pos_type=1 时取值 0 至 100 Time x-axis position. Values 0 to 2 for time_pos_type = 0 and 0 to 100 for time_pos_type = 1

		to 100 for time_pos_type = 1
time_pos_y	数字 Numbers	时间 y 轴位置 , time_pos_type=0 时取值 0 至 2 , time_pos_type=1 时取值 0 至 100 Time y-axis position. Values 0 to 2 for time_pos_type = 0 and 0 to 100 for time_pos_type = 1
show_week	选项(Option): 0 1	1 显示星期, 0 不显示星期 1 shows the week, 0 does not show the week
time_format	选项(Option): yyyy-mm-dd hh:mm:ss yyyy/mm/dd hh:mm:ss yy-mm-dd hh:mm:ss yy/mm/dd hh:mm:ss hh:mm:ss_dd/mm/yyyy hh:mm:ss_dd-mm-yyyy hh:mm:ss_mm/dd/yyyy hh:mm:ss_mm-dd-yyyy mm/dd/yyyy hh:mm:ss mm-dd-yyyy hh:mm:ss	时间格式 由于 CGI URL 不能包含空格字符'', 所以在设置参数时把时间格式的空格换成了下划线'_', 而响应消息的报文中保留的时间格式的空格字符。 比如设置参数时 yyyy-mm-dd hh:mm:ss 响应消息报文中 yyyy-mm-dd hh:mm:ss Time format Because the CGI URL can not contain the space character ' ', the time format space is replaced by the underscore '_' when setting the parameters, and the space characters in the time format reserved in the response message's message. For example, when setting parameters: yyyy-mm-dd hh: mm: ss Response message parameters: yyyy-mm-dd hh: mm: ss
title_utf8		标题内容 按照 HTTP URL 的规范, 如果 title_utf8 的值都是字母和数字则不需要转换, 如果包含其他字符则需要转换为 utf8 编码的字符串。 例如: ipcamera title_utf8=ipcamera 你好 title_utf8=%E4%BD%A0%E5%A5%BD 你好 ipcamera title_utf8=%E4%BD%A0%E5%A5%BDipcamera Title content The title_utf8 parameter specification: according to the HTTP URL specification, if the value of title_utf8 is both alphanumeric and the number does not need to be converted, if it contains other characters, it needs to be converted to a utf8 encoded string. For example: ipcamera title_utf8=ipcamera

		你好 title_utf8=%E4%BD%A0%E5%A5%BD 你好 ipcamera title_utf8=%E4%BD%A0%E5%A5%BDipcamera
--	--	---

响应的报文

Response message

状态码 Status code	内容 Content	描述 Description
200	<?xml version="1.0" encoding="UTF-8"?> <osd enable="1" color="1" fontsize="1" title_pos_type="1" title_pos_x="1" title_pos_y="0" show_res_bit="0" time_pos_type="1" time_pos_x="1" time_pos_y="0" show_week="1" time_format="yyyy-mm-dd hh:mm:ss" title_utf8="XXXXXXXX"/>	请求成功。参数的值是： enable: 启用或禁用 OSD color: 颜色 fontsize: 字体尺寸 title_pos_type: 标题位置类型 title_pos_x: 标题 x 轴位置 title_pos_y: 标题 y 轴位置 show_res_bit: 是否显示分辨率和码率 time_pos_type: 时间位置类型 time_pos_x: 时间 x 轴位置 time_pos_y: 时间 y 轴位置 show_week: 是否显示星期 time_format: 时间格式 title_utf8: 标题内容 The request was successful. The value of the parameter is: enable: Enable or disable OSD color: Color fontsize: Font size title_pos_type: Title position type title_pos_x: Title x-axis position title_pos_y: Title y-axis position show_res_bit : Whether to display the resolution and bit rate time_pos_type: Time position type time_pos_x: Time x-axis position time_pos_y: Time y-axis position show_week : Whether to show the week time_format: Time format title_utf8: Title content

400	<?xml version="1.0" encoding="UTF-8"?> <fault> <value>/cgi-bin/osd</value> <reason>enable: 0 or 1</reason> </fault>	参数 enable 错误 (其他参数的错误提示类似, 不重 复解释) Parameter enable error (Other parameters similar to the wrong tips do not repeat the explanation)

3.14 图像

3.14 Image

/cgi-bin/image?uid=XXXXXXX
/cgi-bin/image?brightness=128&contrast=128&saturation=128&sharpness=128&uid=XXXXXXX
/cgi-bin/image?brightness=128&contrast=128&saturation=128&sharpness=128&hlc=128&blc=12
8&nr2d=128&nr3d=128&tvsystem=60&antificker=1&uid=XXXXXXX

参数名称 Parameter name	参数值 Parameter value	描述 Description
uid		会话的用户 id, 通过/cgi-bin/getuid 接口得到的 id User id for the session. The id passed through the /cgi-bin/getuid interface.
brightness	数字 0 至 255 Numbers from 0 to 255	亮度 Brightness
contrast	数字 0 至 255 Numbers from 0 to 255	对比度 Contrast
saturation	数字 0 至 255 Numbers from 0 to 255	饱和度 Saturation
sharpness	数字 0 至 255 Numbers from 0 to 255	锐度 Sharpness
hlc	数字 0 至 255 Numbers from 0 to 255	强光抑制 Highlight Compensation
blc	数字 0 至 255 Numbers from 0 to 255	背光控制 Back Light Control
nr2d	数字 0 至 255 Numbers from 0 to 255	2D 降噪 2D noise reduction

	255	
nr3d	数字 0 至 255 Numbers from 0 to 255	3D 降噪 3D noise reduction
tvsystem	数字 50 或 60 Numbers 50 or 60	系统制式 system mode
antificker	数字 0 或 1 Numbers 0 or 1	抗闪开关 forced antificker

响应的报文

Response message

状态码 Status code	内容 Content	描述 Description
200	<?xml version="1.0" encoding="UTF-8"?> <image brightness="128" contrast="128" saturation="128" sharpness="128"/>	请求成功。参数的值是： brightness: 亮度 contrast: 对比度 saturation: 饱和度 sharpness: 锐度 The request was successful. The value of the parameter is: brightness: Brightness contrast: Contrast saturation: Saturation sharpness: Sharpness
400	<?xml version="1.0" encoding="UTF-8"?> <fault> <value>/cgi-bin/image</value> <reason>brightness range: 0-255</reason> </fault>	参数 brightness 错误 (其他参数的错误提示类似, 不重复解释) Parameter brightness error (Other parameters similar to the wrong tips do not repeat the explanation)

3.15 PTZ 控制

3.15 PTZ

停止 (stop)

/cgi-bin/ptz_ctrl?stop=1&uid=XXXXXXXXXX

左 (left)

/cgi-bin/ptz_ctrl?move_x=-1&move_y=0&speed=5&uid=XXXXXXXXXX

右 (right)

/cgi-bin/ptz_ctrl?move_x=1&move_y=0&speed=5&uid=XXXXXXXXXX

上 (up)

/cgi-bin/ptz_ctrl?move_x=0&move_y=1&speed=5&uid=XXXXXXXXXX

下 (down)

/cgi-bin/ptz_ctrl?move_x=0&move_y=-1&speed=5&uid=XXXXXXXXXX

左上 (upper left)

/cgi-bin/ptz_ctrl?move_x=-1&move_y=1&speed=5&uid=XXXXXXXXXX

左下 (lower left)

/cgi-bin/ptz_ctrl?move_x=-1&move_y=-1&speed=5&uid=XXXXXXXXXX

右上 (upper right)

/cgi-bin/ptz_ctrl?move_x=1&move_y=1&speed=5&uid=XXXXXXXXXX

右下 (lower right)

/cgi-bin/ptz_ctrl?move_x=1&move_y=-1&speed=5&uid=XXXXXXXXXX

放大 (zoom narrow)

/cgi-bin/ptz_ctrl?zoom=1&uid=XXXXXXXXXX

缩小 (zoom wide)

/cgi-bin/ptz_ctrl?zoom=-1&uid=XXXXXXXXXX

近焦 (focus near)

/cgi-bin/ptz_ctrl?focus=1&uid=XXXXXXXXXX

远焦 (focus far)

/cgi-bin/ptz_ctrl?focus=-1&uid=XXXXXXXXXX

光圈变大 (iris open)

/cgi-bin/ptz_ctrl?iris=1&uid=XXXXXXXXXX

光圈变小 (iris close)

/cgi-bin/ptz_ctrl?iris=-1&uid=XXXXXXXXXX

调用预置点 (call preset)

/cgi-bin/ptz_ctrl?call_preset=1&uid=XXXXXXXXXX

添加预置点 (add preset)

/cgi-bin/ptz_ctrl?add_preset=1&uid=XXXXXXXXXX

删除预置点 (delete preset)

/cgi-bin/ptz_ctrl?delete_preset=1&uid=XXXXXXXXXX

参数名称 Parameter name	参数值 Parameter value	描述 Description
uid		会话的用户 id, 通过/cgi-bin/getuid 接口得到的 id User id for the session. The id passed through the /cgi-bin/getuid interface.
speed	数字 1 至 10 Numbers from 1 to 10	速度 Speed
		其他参数不列举, 按照上文列举的 URL 使用 Other parameters are not listed, according to the URL listed above

响应的报文

Response message

状态码 Status code	内容 Content	描述 Description
200	<?xml version="1.0" encoding="UTF-8"?> <ptz_ctrl>true</ptz_ctrl>	请求成功。 The request was successful.
400	<?xml version="1.0" encoding="UTF-8"?> <fault> <value>/cgi-bin/ptz_ctrl</value> <reason>move_x range: -1,0,1</reason> </fault>	参数 move_x 错误 (其他参数的错误提示类似, 不重 复解释) Parameter move_x error (Other parameters similar to the wrong tips do not repeat the explanation)

3.16 移动侦测配置

3.16 Motion Detect configuration

/cgi-bin/motion?uid=XXXXXXX
/cgi-bin/ motion?enable=0&uid=XXXXXXX
/cgi-bin/ motion?enable=1&uid=XXXXXXX
/cgi-bin/ motion?enable=1& blockcount=22x18&areavalue=XXXXXXXX &uid=XXXXXXX
/cgi-bin/motion?enable=1&sensitivity=80&alarmthreshold=20&enable_nighttime=1&night_sensi
tivity=80&night_alarmthreshold=20&blockcount=22x18&areavalue=XXXXXXXXX&uid=XXXXXXX

参数名称 Parameter name	参数值 Parameter value	描述 Description
uid		会话的用户 id, 通过/cgi-bin/getuid 接口得到的 id User id for the session. The id passed through the /cgi-bin/getuid interface.
enable	选项(Option) 1 0	移动侦测使能 Motion detection enable 1 Start motion detection 0 Turn off motion detection.
sensitivity	数字 1 至 100	灵敏度 sensitivity
alarmthreshold	数字 1 至 100	报警门限值 alarm threshold.

enable_nighttime	选项(Option) 1 0	夜间参数使能 1 启用夜间参数 0 停用夜间参数 夜间参数包括: night_sensitivity, night_alarmthreshold. Night parameter enable 1 Enable nighttime parameters 0 Disable nighttime parameters. Night parameters include: night_sensitivity, night_alarmthreshold.
night_sensitivity	数字 1 至 100	夜间灵敏度 Night sensitivity
night_alarmthreshold	数字 1 至 100	夜间报警门限值 Night alarm threshold
blockcount	字符串 行块数 x 列块数	移动侦测的区域块数 Number of area blocks for motion detection
areavalue		移动侦测区域值 说明: 区域块数从左往右每 8 块按位填充到一个字节里面, 多余位填充 0(1 代表被选中块, 0 代表没有被选中块), 并对这些字节进行 16 进制字符串的编码, 就是最终的移动侦测区域值。 例如: 4x4 的区域全部选中, 移动侦测区域值为:ffff, 全部不选中, 则为 0000. Motion detection area value Description: Each 8 blocks from left to right are filled in a byte bit by bit, and the extra bit is filled in 0 (1 represents the selected block, 0 represents the unselected block), and these bytes are encoded in a hexadecimal string, which is the final value of the mobile detection region. For example: All 4x4 areas are selected, the motion detection area value is: ffff, and all are unchecked, it is 0000.

响应的报文

Response message

状态码 Status code	内容 Content	描述 Description
200	<?xml version="1.0" encoding="UTF-8"?> <motion enable="1" sensitivity="80" alarmthreshold="20" enable_nighttime="1" night_sensitivity="80" night_alarmthreshold="22" blockcount="22x18 " areavalue="xxxxxxxxxx"/>	请求成功。参数的值是： enable: 启用或禁用移动侦测 sensitivity: 灵敏度 alarmthreshold: 报警门限值 enable_nighttime: 启用或停用夜间参数 night_sensitivity: 夜间灵敏度 night_alarmthreshold: 夜间报警门限值 blockcount: 移动侦测的区域块数 areavalue: 移动侦测区域值
400	<?xml version="1.0" encoding="UTF-8"?> <fault> <value>/cgi-bin/motion</value> <reason>enable: 0 or 1</reason> </fault>	参数 enable 错误 (其他参数的错误提示类似, 不重复解释) Parameter enable error (Other parameters similar to the wrong tips do not repeat the explanation)

3.17 获取设备型号 (OEM)

3.17 Obtain Equipment Model

/cgi-bin/getmodel?uid=XXXXXXXX

参数名称 Parameter name	参数值 Parameter value	描述 Description
uid		会话的用户 id, 通过/cgi-bin/getuid 接口得到的 id User id for the session. The id passed through the /cgi-bin/getuid interface.

响应的报文

Response message

状态码 Status code	内容 Content	描述 Description

200	<pre><?xml version="1.0" encoding="UTF-8"?> <model>MC200J6</model></pre>	假设是 MC200J6 型号进行操作并请求成功。 model:OEM 设备型号 MC200J6
		Suppose the MC200J6 model operates and requests success. model:OEM Equipment type:MC200J6

3.18 用户管理

3.18User Management

/cgi-bin/user_management?action=add&name=XXXX&newpasswd=XXX&privilege=User&enable=Enable&uid=XXXXXX
 /cgi-bin/user_management?action=delete&name=XXXX&uid=XXXXXX
 /cgi-bin/user_management?action=edit&name=XXXX&newpasswd=XXX&privilege=User&enable=Disable&uid=XXXXXX
 /cgi-bin/user_management?action=edit&name=XXXX&newpasswd=XXX&uid=XXXXXX
 /cgi-bin/user_management?action=get_user&uid=XXXXXX

1. 使用 get_user 指令可以获取当前设备中的所有的用户的 XML 信息。

用户管理即是权限管理。

2. 普通用户 User: 只能查看 IPC 的配置，不能修改配置的用户。

3. 操作用户 Operator: 拥有除了用户管理外的所有权限

4. 管理员用户 Administrator: 拥有 IPC 的所有的权限

除了相关操作的用户名和密码之外的参数

-add 方法要求: name、newpasswd、privilege、enable

-delete 方法要求: name

-edit 方法要求: name

-edit 方法可选: newpasswd、privilege、enable

1. The get_user instruction can be used to obtain the XML information of all users in the current device.

User management is authority management.

2. Ordinary User: User who can only view the configuration of IPC, can not modify the configuration.

3. Operator for Operator: All rights except user management

4. Administrator: Has all the permissions of IPC

Parameters in addition to username and password for the associated action

- Add Requires: name, password, privilege, enable

- Delete Requires: name

- Edit Requires: name

- Edit Optional: password, privilege, enable

参数名称 Parameter name	参数值 Parameter value	描述 Description
uid		会话的用户 id, 通过/cgi-bin/getuid 接口得到的 id User id for the session. The id passed through the /cgi-bin/getuid interface.
action (must)	1: add 2: delete 3: edit 4: get_user	add 是添加用户操作 delete 是删除用户操作 edit 是编辑用户操作 get_user 是获取用户所有的 XML 1. Add is to add user actions 2. delete is a delete user operation 3. Edit is an edit user operation 4. get_user is to get all the user's XML
name (must)	字符串 Char *	用户名 PS: 最大允许 40 个字节的长度。 User name PS: Maximum allowable length of 40 bytes.
newpasswd	字符串 Char*	Password: To edit the user's password
privilege	字符串 Char* 1、User 2、Administrator 3、Operator	权限问题： User 只能查看配置，不能修改配置 Administrator 拥有所有权限 Operator 拥有除了用户管理外的所有权限 User Configuration can only be viewed, but configuration cannot be modified. Administrator Ownership Operator Have all rights except user management
enable	字符串 Char* 1、Enable 2、Disable	Enable: 使能用户 Disable: 失能用户 Enable: enabling users Disable: Disabled Users

响应的报文

Response message

状态码 Status	内容 Content	描述 Description
---------------	---------------	-------------------

code		
400	<?xml version="1.0" encoding="UTF-8"?> <fault> <value>/cgi-bin/user_management</value> <reason>action: add or edit or delete</reason> </fault>	action 参数不是 add or edit or delete 报错 The parameter is not add or edit or delete an error.
400	<?xml version="1.0" encoding="UTF-8"?> <fault> <value>/cgi-bin/user_management</value> <reason>error username</reason> </fault>	delete 参数输入的用户名不存在的时候上报此错误。 (不能够删除不存在的用户) Report this error when the user name entered by the parameter does not exist. (Can't delete non-existent users)
400	<?xml version="1.0" encoding="UTF-8"?> <fault> <value>/cgi-bin/user_management</value> <reason>error username duplicated</reason> </fault>	add 参数输入相同的用户名的时候上报此错误。 (不能够创建已经存在的用户) Report this error when the user name entered by the parameter is exist.(unable to create existing users)
400	<?xml version="1.0" encoding="UTF-8"?> <fault> <value>/cgi-bin/user_management</value> <reason>username none exist to edit</reason> </fault>	edit 参数输入不同的用户名的时候上报错误。 (不能够编辑不存在的用户) Report this error when the user name entered by the parameter does not exist. (unable to edit non-existent users)
400	<?xml version="1.0" encoding="UTF-8"?> <fault> <value>/cgi-bin/user_management</value> <reason>privilege: User or Administrator or Operator</reason> </fault>	Privilege 参数输入错误，需要输入 User or Administrator or Operator Privilege parameter input error, need to enter User or Administrator or Operator
400	<?xml version="1.0" encoding="UTF-8"?> <fault> <value>/cgi-bin/user_management</value> <reason>enable: Enable or Disable</reason> </fault>	enable 参数输入错误，需要输入 Enable or Disable enable parameter input error, need to enter Enable or Disable
400	<?xml version="1.0" encoding="UTF-8"?> <fault> <value>/cgi-bin/user_management</value> <reason>The parameters must Correct include name,newpasswd,privilege,enable</reason> </fault>	Add 方法参数缺少错误，需要输入全部 4 个的所有参数才能创建新用户。 The Add parameter is missing errors, and all four parameters need to be entered to create a new user.
400	<?xml version="1.0" encoding="UTF-8"?> <fault>	用户权限不是管理员，无法进行用户管理配置项。

	<value>/cgi-bin/user_management</value> <reason>Non-administrators cannot edit users</reason> </fault>	User privileges are not administrators. User management configuration items cannot be modified.
400	<?xml version="1.0" encoding="UTF-8"?> <fault> <value>/cgi-bin/user_management</value> <reason>username not exist to edit</reason> </fault>	登录用户不存在 Login user does not exist

3.19 抓图上传

3.19 snapshot upload

```
/cgi-bin/snapshot.cgi&username=XXXXXX&password=XXXXXX
/cgi-bin/snapshot.cgi?stream=0&username=XXXXXX&password=XXXXXX
/cgi-bin/snapshot.cgi?stream=0&upload=0&username=XXXXXX&password=XXXXXX
/cgi-bin/snapshot.cgi?stream=1&upload=1&username=XXXXXX&password=XXXXXX
```

- 1、开启 onvif 认证之后，就需要输入 username 参数和 password 参数。
- 2、缺省 stream 参数后，跟着 username 的一定要使用&，否则上报错误。
- 3、缺省 stream 参数后，默认为 stream0。
- 4、缺省 upload 参数后，不上报错误。

1. After the onvif authentication is enabled, you need to enter the username parameter and password parameter.
2. After the default stream parameter, follow the username's to use &, otherwise, report the error.
3. After the default stream parameter, the default value is stream0.
4. After the default upload parameter, no error is reported.

参数名称 Parameter name	参数值 Parameter value	描述 Description
uid		会话的用户 id，通过/cgi-bin/getuid 接口得到的 id User id for the session. The id passed through the /cgi-bin/getuid interface.
stream(must)	数字 0-1 Number 0-1	参数值为 0 代表：子码流抓图 参数值为 1 代表：主码流抓图 Parameter value of 0 represents: sub code stream snapshot The parameter value of 1 represents: Master

		bitstream snapshot
upload(optional)	数字 0-3 Number 0-3	参数值为 0 代表: 抓图后上传到 SD 卡 参数值为 1 代表: 抓图后上传到 FTP 参数值为 2 代表: 抓图后上传到 Email 参数值为 3 代表: 抓图后上传到远程的 NFS 服务器 Parameter value is 0: upload to SD card after capturing parameter value is 1, which means: upload to FTP after capturing Parameter value is 2: upload to email after capturing Parameter value is 3: upload to remote NFS server after snapshot

响应的报文

Response message

状态码 Status code	内容 Content	描述 Description
200	<?xml version="1.0" encoding="UTF-8"?> <upload>OK</upload>	请求成功。参数的值是: 提示抓图完全并上传成功 The request succeeded. The value of the parameter is: Successful upload
400	<?xml version="1.0" encoding="UTF-8"?> <fault> <value>/cgi-bin/snapshot</value> <reason>sd not mount</reason> </fault>	SD 卡没有插入或者 SD 卡没有部署成功。 The SD card was not inserted or deployed successfully.
400	<?xml version="1.0" encoding="UTF-8"?> <fault> <value>/cgi-bin/snapshot</value> <reason>upload 0 or 1 or 2 or 3</reason> </fault>	Upload 的参数不是 0-3 的数值就会上报此错误。 This error will be reported if the parameter of Upload is not 0-3.
400	<?xml version="1.0" encoding="UTF-8"?> <fault> <value>/cgi-bin/snapshot</value> <reason>Ftp not deploy</reason> </fault>	FTP 的服务器没有部署 FTP servers are not deployed.
400	<?xml version="1.0" encoding="UTF-8"?> <fault> <value>/cgi-bin/snapshot</value>	SD 卡没有插入, 或者 SD 卡损坏, 或者没有部署。

	<reason>sd card not mounted</reason> </fault>	The SD card is not inserted, damaged or deployed.
400	<?xml version="1.0" encoding="UTF-8"?> <fault> <value>/cgi-bin/snapshot</value> <reason>NFS Server not mounted</reason> </fault>	NFS 没有挂载 NFS Server not mounted

3.20 获取录像文件路径

3.20 Get the video file path

```
/cgi-bin/get_record_query?year=XXXX&month=XX&day=XX&uid=XXXXXX
/cgi-bin/get_record_query?year=XXXX&month=XX&day=XX&username=XXXXXXX&password=XXX
XXX
/cgi-bin/get_record_query?year=XXXX&month=XX&day=XX&stream=XXXX&record_mode=XX&m
edia_type=XX&uid=XXXXXX
/cgi-bin/get_record_query?year=XXXX&month=XX&day=XX&stream=XXXX&record_mode=XX&m
edia_type=XX&start_hour=XXXX&start_min=XX&start_sec=XX&uid=XXXXXX
/cgi-bin/get_record_query?year=XXXX&month=XX&day=XX&stream=XXXX&record_mode=XX&m
edia_type=XX&start_hour=XXXX&start_min=XX&start_sec=XX&end_hour=XXXX&end_min=XX&e
nd_sec=XX&uid=XXXXXX
```

1: 必要的参数为:

year,month,day

2: 可选参数为

stream, record_mode, media_type,
start_hour, start_min, start_sec,
end_hour, end_min, end_sec。

以上的参数在缺省的时候，初始化的值为：

```
stream = -1;
record_mode = -1;
media_type = 3;
start_hour = 0;
start_min = 0;
start_sec = 0;
end_hour = 23;
end_min = 59;
end_sec = 59;
```

1: The necessary parameters are:

Year,month,day

2: The optional parameter is

Stream, record_mode, media_type,
Start_hour, start_min, start_sec,
End_hour, end_min, end_sec.

The above parameters are initialized by default:

```
Stream = -1;  
Record_mode = -1;  
Media_type = 3;  
Start_hour = 0;  
Start_min = 0;  
Start_sec = 0;  
End_hour = 23;  
End_min = 59;  
End_sec = 59;
```

含义为：默认显示用户想要得到时间是从 XX 年 XX 月 XX 日的 0 时 0 分 0 秒到 23 时 59 分 59 秒的全部录像数据，其中码流类型为所有码流，媒体类型为视频和音频的格式。

The meaning is: the default display user wants to get all the recording data from 0:0:0 to 23:59:59 of XX, XX, XX, where the code stream type is all streams, and the media type is video. And audio format.

如何获得录像文件的下载 URL?

URL = IP 地址 + /playback/ + filepath

格式例如：

<http://192.168.2.34/playback/mnt/mmc0/schedule/20191025/135144-av-1.mp4>

How do I get the download URL of the video file?

URL = IP address + /playback/ + filepath

The format is for example:

<http://192.168.2.34/playback/mnt/mmc0/schedule/20191025/135144-av-1.mp4>

参数名称 Parameter name	参数值 Parameter value	描述 Description
uid		会话的用户 id, 通过/cgi-bin/getuid 接口得到的 id User id for the session. The id passed through the /cgi-bin/getuid interface.
year	数字大于 1900 Number > 1900	必要的参数：查找 IPC 的录像的信息 哪一年 Required parameters: Find information about IPC recordings which year

month	数字 1-12 Number 1-12	必要的参数: 查找 IPC 的录像的信息 哪一月 Required parameters: Find information about IPC recordings Which month
day	数字 1-31 Number 1-31	必要的参数: 查找 IPC 的录像的信息 哪一天 Required parameters: Find information about IPC recordings Which day
stream	数字-1, 1, 2 Number -1,1,2	可选的参数: 码流的类型 -1: 所有类型的码流 1: 主码流 2: 子码流 Optional parameters: type of stream -1: All types of streams 1: primary stream 2: substream
record_mode	数字-1, 2, 4, 8 Number -1, 2, 4, 8	可选的参数: 录像的类型 -1: 全部录像 2: 定时录像 4: 移动侦测录像 8: 告警录像 Optional parameters: type of recording -1: All videos 2: Timed recording 4: Motion detection video 8: Alarm recording
media_type	数字: 2, 3 Number: 2, 3	可选的参数: 媒体的类型 2: 视频 3: 视频和音频 Optional parameters: type of media 2: Video 3: Video and audio
start_hour	数字 0-23 Number 0-23	可选的参数: 录像的起始小时 Starting hour of the video
start_min	数字 0-59 Number 0-59	可选的参数: 录像的起始分钟 The starting minute of the video
start_sec	数字 0-59 Number 0-59	可选的参数: 录像的起始秒 The starting second of the recording
end_hour	数字 0-23 Number 0-23	可选的参数: 录像的结束小时 Optional parameters: the end of the video

end_min	数字 0-59 Number 0-59	可选的参数: 录像的结束分钟 Optional parameters: the end of the recording
end_sec	数字 0-59 Number 0-59	可选的参数: 录像的结束秒 Optional parameters: the end of the recording

响应的报文

Response message

状态码 Status code	内容 Content	描述 Description
200	<?xml version="1.0" encoding="UTF-8"?> <RecordQueryInfo> <items filepath="/mnt/mmc0/schedule/20191025/151233-av-1.mp4 " filesize="32276556" record_mode="2" media_type="3" stream_index="1" start_time="2019-10-25 15:12:33"/> </RecordQueryInfo>	请求成功。参数的值是: 录像文件的所有数据 The request succeeded. The value of the parameter is: All data of the video file
400	<?xml version="1.0" encoding="UTF-8"?> <fault> <value>/cgi-bin/get_record_query</value> <reason>record_month must between 1-12</reason> </fault>	输入月的值不在 1-12 月的范围内 The value of the input month is not in the range of January to December.
400	<?xml version="1.0" encoding="UTF-8"?> <fault> <value>/cgi-bin/get_record_query</value> <reason>record_day must between 1-31</reason> </fault>	输入日的值不在 1-31 日的范围内 The value of the input date is not in the range of 1-31 days.
400	<?xml version="1.0" encoding="UTF-8"?> <fault> <value>/cgi-bin/get_record_query</value> <reason>start_hour must between 0-23</reason> </fault>	输入录像起始小时不是 0-23 的范围内 Input recording start time is not in the range of 0-23
400	<?xml version="1.0" encoding="UTF-8"?> <fault> <value>/cgi-bin/get_record_query</value> <reason>start_min must between 0-59</reason> </fault>	输入录像起始分钟不是 0-59 的范围内 Input recording start minute is not in the range of 0-59
400	<?xml version="1.0" encoding="UTF-8"?> <fault> <value>/cgi-bin/get_record_query</value> <reason>start_sec must between 0-59</reason>	输入录像起始秒不是 0-59 的范围内 Input recording start seconds are not in the range of 0-59

	</fault>	
400	<?xml version="1.0" encoding="UTF-8"?> <fault> <value>/cgi-bin/get_record_query</value> <reason>end_hour must between 0-23</reason> </fault>	输入录像结束小时不是 0-23 的范围内 Input recording end time is not in the range of 0-23
400	<?xml version="1.0" encoding="UTF-8"?> <fault> <value>/cgi-bin/get_record_query</value> <reason>end_min must between 0-59</reason> </fault>	输入录像结束分钟不是 0-59 的范围内 Input recording end minutes are not in the range of 0-59
400	<?xml version="1.0" encoding="UTF-8"?> <fault> <value>/cgi-bin/get_record_query</value> <reason>end_sec must between 0-59</reason> </fault>	输入录像结束秒不是 0-59 的范围内 Input recording end seconds are not in the range of 0-59

3.21 固件升级

3.21 Upgrade Firmware

详细的信息请查看 upload.html 文档。

JS 使用异步的调用方式：

```

1.  <!DOCTYPE html PUBLIC "-//W3C//DTD XHTML 1.0 Transitional//EN" "http://www.w3.org/TR/xhtml1/DTD/xhtml1-transitional.dtd">
2.  <html xmlns="http://www.w3.org/1999/xhtml">
3.  <head>
4.      <title>IP Camera</title>
5.  </head>
6.  <body>
7.  <div id="m_plugin"></div>
8.
9.  <input type="file" name="file1" id="filename"/>
10. <input type="submit" id="upgrade_submit" value="Submit" onclick="upload()"/>
11.
12. <script type="text/javascript">
13.     function upload(){
14.         var XMLHttpRequest = null;
15.         if (window.XMLHttpRequest) {
16.             XMLHttpRequest = new XMLHttpRequest();

```

```

17.         }
18.         else if (window.ActiveXObject){
19.             XMLHttpRequest = new ActiveXObject("Microsoft.XMLHTTP");
20.         }
21.         var file = document.getElementById("filename").files[0];

22.         XMLHttpRequest.open("POST", "http://192.168.2.67/OnvifFirmwareUp
grade", true);
23.         XMLHttpRequest.setRequestHeader("Content-Type", "application/oct
et-stream");
24.         XMLHttpRequest.setRequestHeader("Access-Control-Allow-Origin", "*");
25.         XMLHttpRequest.setRequestHeader("Cache-Control", "no-cache");
26.         XMLHttpRequest.setRequestHeader("Authorization", "Basic QWxpY2U6
MTIzNDU2");
27.         XMLHttpRequest.send(file);
28.     }
29. </script>
30. </body>
31. </html>

```

3.22 RTMP 配置

3.22 RTMP Configuration

/cgi-bin/rtmp?uid=XXXXXX
/cgi-bin/rtmp?enable=0&uid=XXXXXXXXX
/cgi-bin/rtmp?enable=1&uid=XXXXXXXXX
/cgi-bin/rtmp?enable=1&server=XXXXXX&appname=XXXXXXXXXX&streamid=XXXXXX&streamno=XXX
XX&type=XXXXXX&port=XXXXXX&uid=XXXXXXXXX

参数名称 Parameter name	参数值 Parameter value	描述 Description
uid		会话的用户 id, 通过/cgi-bin/getuid 接口得到的 id User id for the session. The id passed through the /cgi-bin/getuid interface.
enable	0-1	0: 关闭 RTMP 1: 打开 RTMP 0: Disable RTMP 1: Open RTMP

server	字符串 Char *	服务器的地址, 类似于: 192.168.2.125 The address of the server, similar to: 192.168.2.125
appname	字符串 Char*	RTMP 的应用名称 RTMP application name
streamid	字符串 Char*	RTMP 的流 ID RTMP stream ID
port	整型 Int 0-65535	RTMP 的端口号 RTMP port number
streamno	0-1	码流的类型 0: 主码流, 1: 子码流 Stream type 0: main stream, 1: sub stream
type	0-1	协议的类型: 0: 标准模式, 1: 兼容模式 Type of agreement: 0: standard mode, 1: compatible mode

响应的报文

Response message

状态码 Status code	内容 Content	描述 Description
200	<?xml version="1.0" encoding="UTF-8"?> <RtmpConfig Enable="1" Streamno="0" Server="192.168.2.12" Port="98" Appname="live5" Streamid="55" Type="1"/>	请求成功。参数 user_management 显示为 OK
400	<?xml version="1.0" encoding="UTF-8"?> <fault> <value>/cgi-bin/rtmp</value> <reason>enable: 0 or 1</reason> </fault>	enable 参数不是 0 或者 1 上报参数报错。 If the enable parameter is not 0 or 1, an error is reported in the parameter.
400	<?xml version="1.0" encoding="UTF-8"?> <fault> <value>/cgi-bin/rtmp</value> <reason>server is NULL</reason>	Server 的服务器地址输入字符串为空上报错误。 The server's server address input string is empty

	</fault>	to report an error.
400	<?xml version="1.0" encoding="UTF-8"?> <fault> <value>/cgi-bin/rtmp</value> <reason>port range: 0-65535</reason> </fault>	port 端口号参数的范围不是 0-65535 port number parameter range is not 0-65535
400	<?xml version="1.0" encoding="UTF-8"?> <fault> <value>/cgi-bin/rtmp</value> <reason>streamno range: 0-1</reason> </fault>	streamno 的输入参数的范围不是 0-1 上报错误。 The input parameter range of streamno is not 0-1 to report an error.
400	<?xml version="1.0" encoding="UTF-8"?> <fault> <value>/cgi-bin/rtmp</value> <reason>appname is NULL</reason> </fault>	appname 的参数输入空字符串上报错误。 An error was reported in the input string of appname.
400	<?xml version="1.0" encoding="UTF-8"?> <fault> <value>/cgi-bin/rtmp</value> <reason>streamid is NULL</reason> </fault>	streamid 参数输入空字符串上报错误。 The streamid parameter reports an empty string input error.
400	<?xml version="1.0" encoding="UTF-8"?> <fault> <value>/cgi-bin/rtmp</value> <reason>type range: 0-1</reason> </fault>	type 参数输入的值范围不为 0-1 上报错误。 The value entered for the type parameter is not 0-1 and reports an error.

3.23 本地录像存储配置

3.23 ScheduleStorage Configuration

```
/cgi-bin/setScheduleStorage?uid=XXXXXX
/cgi-bin/setScheduleStorage?username=admin&password=123456
/cgi-bin/setScheduleStorage?localEnable=0&remoteEnable=1&remote_nfs_server=XXXXXX&nfs_server_path=XXXXXXXX&recordFileSize=XXXXXX&stream=1&JpegInterval=1&enable=1&uid=XXXXXXXXX
```

参数名称 Parameter name	参数值 Parameter value	描述 Description
uid		会话的用户 id, 通过/cgi-bin/getuid 接口得到的 id User id for the session. The id passed through the /cgi-bin/getuid interface.

localEnable	0-1	0: 关闭本地存储 1: 打开本地存储 0: Disable Local storage 1: Open Local storage
remoteEnable	0-1	0: 关闭网络存储 1: 打开网络存储 0: Disable Network Storage 1: Open Network Storage
recordFileSize	整型 Int 2, 5, 10, 20, 30	录像文件的长度 Video file length
remote_nfs_server	字符串 Char*	只有在 remoteEnable=1 的时候才生效 网络存储的服务器。 Only effective when remoteEnable = 1 Network storage server.
nfs_server_path	字符串 Char*	只有在 remoteEnable=1 的时候才生效 网络存储的服务器路径。 Only effective when remoteEnable = 1 The server path of the network storage.
stream	0, 1, 2	码流的类型 0: 主码流, 1: 子码流, 2: 主码流和子码流 Stream type 0: main stream, 1: sub stream, 2: main stream and sub stream
JpegInterval	0-1	0: 关闭抓图功能 1: 打开抓图功能 0: Disable screenshot function 1: enable the capture function
enable	0-1	如果该值为 0 的话, 证明定时录像不进行存储。 如果该值为 1 的话, localEnable=1 的开关打开的话, 存储在本地录像之中, 否则不存储在本地存储之中。 remoteEnable=1 的开关打开的话, 存储在网络存储之中, 否则不存储在网络存储之中。 If the value is 0, it means that the timer recording is not stored. If the value is 1, the localEnable = 1 switch is stored in the local recording, otherwise it is not stored in the local storage.

		When the remoteEnable = 1 switch is turned on, it is stored in network storage, otherwise it is not stored in network storage.
--	--	--

响应的报文

Response message

状态码 Status code	内容 Content	描述 Description
200	<?xml version="1.0" encoding="UTF-8"?> <RecordConfig> <Common LocalEnable="1" RemoteEnable="0" MountParam="" RecordFileSize="10"/> <ScheduleRecord Stream="1" LocalStore="1" RemoteStore="0" JpegInterval="1"/> </RecordConfig>	请求成功。 The request was successful.
400	<?xml version="1.0" encoding="UTF-8"?> <fault> <value>/cgi-bin/setScheduleStorage</value> <reason>enable: 0,1 </reason> </fault>	enable 参数不是 0 或者 1 就上报参数报错。 If the enable parameter is not 0 or 1, an error is reported in the parameter.
400	<?xml version="1.0" encoding="UTF-8"?> <fault> <value>/cgi-bin/setScheduleStorage</value> <reason>localEnable: 0 or 1</reason> </fault>	localEnable 参数不是 0 或者 1 就上报参数报错。 If the localEnable parameter is not 0 or 1, an error is reported in the parameter.
400	<?xml version="1.0" encoding="UTF-8"?> <fault> <value>/cgi-bin/setScheduleStorage</value> <reason>remoteEnable: 0 or 1</reason> </fault>	remoteEnable 参数不是 0 或者 1 就上报参数报错。 If the remoteEnable parameter is not 0 or 1, an error is reported in the parameter.
400	<?xml version="1.0" encoding="UTF-8"?> <fault> <value>/cgi-bin/setScheduleStorage</value> <reason>recordFileSize: 2,5,10,20,30</reason> </fault>	recordFileSize 参数不是 2,5,10,20,30 这些数据就上报错误。 ReportFileSize parameter is not 2, 5, 10, 20, 30 to report an error
400	<?xml version="1.0" encoding="UTF-8"?> <fault> <value>/cgi-bin/setScheduleStorage</value> <reason>stream: 0,1,2 </reason>	stream 参数不是 0, 1, 2 上报参数报错。 If the stream parameter is not 0 or 1, 2, an error is reported in the parameter.

	</fault>	
400	<?xml version="1.0" encoding="UTF-8"?> <fault> <value>/cgi-bin/setScheduleStorage</value> <reason>JpegInterval: 0,1 </reason> </fault>	JpegInterval 参数不是 0 或者 1 上报参数报错。 If the JpegInterval parameter is not 0 or 1, an error is reported in the parameter.

3.24 移动侦测录像配置

3.24 EventStorage Configuration

```
/cgi-bin/setEventStorage?uid=XXXXXX
/cgi-bin/setEventStorage?username=admin&password=123456
/cgi-bin/setEventStorage?trigger_recording=0&stream=1&record_ftp_upload=XXXXXX&record_email_upload=XXXXXX&trigger_capture=XXXXXX&capture_ftp_upload=1&capture_email_upload=1&capture_motionDetectAlarm=1&uid=XXXXXXXX
```

参数名称 Parameter name	参数值 Parameter value	描述 Description
uid		会话的用户 id, 通过/cgi-bin/getuid 接口得到的 id User id for the session. The id passed through the /cgi-bin/getuid interface.
trigger_recording	0-1	0: 关闭移动侦测存储 1: 打开移动侦测存储 0: Disable motion detection storage 1: Turn on motion detection storage
stream	1-2	1: 主码流 2: 子码流 1: main stream 2: substream
record_ftp_upload	0-1	0: 录像不上传到 FTP 服务器上 1: 录像上传到 FTP 服务器上 0: The video is not uploaded to the FTP server 1: upload video to FTP server
record_email_upload	0-1	0: 录像不上传到 Email 服务器上 1: 录像上传到 Email 服务器上 0: The video is not uploaded to the Email server 1: upload video to Email server

trigger_capture	0-1	0: 关闭移动侦测截图上传 1: 打开移动侦测截图上传 0: Disable motion detection screenshot upload 1: Open motion detection screenshot upload
capture_ftp_upload	0-1	0: 移动侦测截图不上传到 FTP 服务器上 1: 移动侦测截图上传到 FTP 服务器上 0: Motion detection screenshots are not uploaded to the FTP server 1: upload motion detection screenshot to FTP server
capture_email_upload	0-1	0: 移动侦测截图不上传到 Email 服务器上 1: 移动侦测截图上传到 Email 服务器上 0: Motion detection screenshots are not uploaded to the Email server 1: upload motion detection screenshot to Email server
capture_motionDetectAlarm	0-1	0: 关闭移动侦测报警输出 1: 打开移动侦测报警输出 0: Disable motion detection alarm output 1: Turn on motion detection alarm output

响应的报文

Response message

状态码 Status code	内容 Content	描述 Description
200	<?xml version="1.0" encoding="UTF-8"?> <RecordConfig> <MotionDetectRecord Stream="1" LocalStore="1" RemoteStore="1" FtpUpload="0" EmailUpload="0"/> <MotionDetectCapture LocalStore="1" RemoteStore="1" FtpUpload="1" EmailUpload="0" OutputChannelAction_enable="1"/> </RecordConfig>	请求成功。 The request was successful.
400	<?xml version="1.0" encoding="UTF-8"?> <fault> <value>/cgi-bin/setEventStorage</value> <reason>trigger_recording: 0 or 1</reason> </fault>	trigger_recording 参数不是 0 或者 1 上报参数报错。 If the trigger_recording parameter is not 0 or 1, an error is reported in the parameter.
400	<?xml version="1.0" encoding="UTF-8"?> <fault>	stream 参数不是 1 或者 2 上报参数报错。

	<value>/cgi-bin/setEventStorage</value> <reason>stream: 1 or 2</reason> </fault>	If the stream parameter is not 1 or 2, an error is reported in the parameter.
400	<?xml version="1.0" encoding="UTF-8"?> <fault> <value>/cgi-bin/setEventStorage</value> <reason>record_ftp_upload: 0 or 1 </reason> </fault>	record_ftp_upload 参数不是 0 或者 1 上报参数报错。 If the record_ftp_upload parameter is not 0 or 1, an error is reported in the parameter.
400	<?xml version="1.0" encoding="UTF-8"?> <fault> <value>/cgi-bin/setEventStorage</value> <reason>record_email_upload: 0 or 1 </reason> </fault>	record_email_upload 参数不是 0 或者 1 上报参数报错。 If the record_email_upload parameter is not 0 or 1, an error is reported in the parameter.
400	<?xml version="1.0" encoding="UTF-8"?> <fault> <value>/cgi-bin/setEventStorage</value> <reason>trigger_capture: 0 or 1 </reason> </fault>	trigger_capture 参数不是 0 或者 1 上报参数报错。 If the trigger_capture parameter is not 0 or 1, an error is reported in the parameter.
400	<?xml version="1.0" encoding="UTF-8"?> <fault> <value>/cgi-bin/setEventStorage</value> <reason>capture_ftp_upload: 0 or 1 </reason> </fault>	capture_ftp_upload 参数不是 0 或者 1 上报参数报错。 If the capture_ftp_upload parameter is not 0 or 1, an error is reported in the parameter.
400	<?xml version="1.0" encoding="UTF-8"?> <fault> <value>/cgi-bin/setEventStorage</value> <reason>capture_email_upload: 0 or 1 </reason> </fault>	capture_email_upload 参数不是 0 或者 1 上报参数报错。 If the capture_email_upload parameter is not 0 or 1, an error is reported in the parameter.
400	<?xml version="1.0" encoding="UTF-8"?> <fault> <value>/cgi-bin/setEventStorage</value> <reason>capture_motionDetectAlarm: 0 or 1 </reason> </fault>	capture_motionDetectAlarm 参数不是 0 或者 1 上报参数报错。 If the capture_motionDetectAlarm parameter is not 0 or 1, an error is reported in the parameter.

3.25 获取设备状态 (OEM)

3.25 Get device status

/cgi-bin/getDevState?uid=XXXXXXXXX

参数名称 Parameter name	参数值 Parameter value	描述 Description
uid		会话的用户 id, 通过/cgi-bin/getuid 接口得到的 id User id for the session. The id passed through the

		/cgi-bin/getuid interface.
--	--	----------------------------

响应的报文

Response message

状态码 Status code	内容 Content	描述 Description
200	<?xml version="1.0" encoding="UTF-8"?> <DevState sd1="0" sd2="0" system_time="2020-1-16-12-12-43" run_time="0-2-56-40" MemTotal="125620 kB " MemFree="24384 kB"/>	请求成功 The request was successful.

3.26 触发 IO 报警开关

3.26 Trigger IO alarm switch

/cgi-bin/setAlarmState?uid=XXXXXXXXXX

/cgi-bin/setAlarmState?position=1&logicalstate=1&uid=XXXXXXXXXX

参数名称 Parameter name	参数值 Parameter value	描述 Description
uid		会话的用户 id, 通过/cgi-bin/getuid 接口得到的 id User id for the session. The id passed through the /cgi-bin/getuid interface.
position	通道号 Channel number 0-3	设置通道的报警开关 Set channel alarm switch
logicalstate	常开还是常闭开关 Normally open or normally closed switch 0-1	0: 常闭开关 1: 常开开关 0: normally closed switch 1: normally open switch

响应的报文

Response message

状态码 Status code	内容 Content	描述 Description
200	<?xml version="1.0" encoding="UTF-8"?>	请求成功

	<setAlarmState position="0" logicalstate="1"/>	The request was successful.
400	<?xml version="1.0" encoding="UTF-8"?> <fault> <value>/cgi-bin/setAlarmState</value> <reason>position: 0 ~ 3</reason> </fault>	获取参数失败 Position 的参数的范围为 0-3, 其余的范围就会报错。 Failed to get parameters The range of the Position parameter is 0-3, and the rest of the range will report an error.
400	<?xml version="1.0" encoding="UTF-8"?> <fault> <value>/cgi-bin/setAlarmState</value> <reason>logicalstate: 0 ~ 1</reason> </fault>	获取参数失败 logicalstate 的参数的范围为 0-1, 其余的范围就会报错。 Failed to get parameters The range of the logicalstate parameter is 0-1, and the rest of the range will report an error.

3.27 宽动态模式范围开关设置

3.27 WDR Switch settings

/cgi-bin/set_wdr?uid=XXXXXXXX
 /cgi-bin/set_wdr?enable=1&wdr_value=1&uid=XXXXXXXX

参数名称 Parameter name	参数值 Parameter value	描述 Description
uid		会话的用户 id, 通过/cgi-bin/getuid 接口得到的 id User id for the session. The id passed through the /cgi-bin/getuid interface.
enable	0-1	0: 关闭 WDR 开关 1: 打开 WDR 开关 0: Disable WDR switch 1: turn on the WDR switch
wdr_value	0-255	宽动态模式的调节范围 Adjustment range of wide dynamic mode

响应的报文

Response message

状态码 Status code	内容 Content	描述 Description
200	<?xml version="1.0" encoding="UTF-8"?> <Capture WDRMode="1" WDRVValue="53"></Capture>	请求成功 The request was successful.

400	<?xml version="1.0" encoding="UTF-8"?> <fault> <value>/cgi-bin/set_wdr</value> <reason>enable: 0 or 1</reason> </fault>	获取参数失败 enable 的参数的范围为 0-1，其余的范围就会报错。 Failed to get parameters The range of the enableparameter is 0-1, and the rest of the range will report an error.
400	<?xml version="1.0" encoding="UTF-8"?> <fault> <value>/cgi-bin/set_wdr</value> <reason>wdr_value: 0 ~ 255</reason> </fault>	获取参数失败 wdr_value 的参数的范围为 0-255，其余的范围就会报错。 Failed to get parameters The range of the wdr_value parameter is 0-255, and the rest of the range will report an error.

3.28 降噪开关设置

3.28 noise reduction Switch settings

/cgi-bin/set_noise_reduction?uid=XXXXXXXXXX

/cgi-bin/set_noise_reduction?y_2D_value=128&y_3D_value=128&uid=XXXXXXXXXX

参数名称 Parameter name	参数值 Parameter value	描述 Description
uid		会话的用户 id，通过/cgi-bin/getuid 接口得到的 id User id for the session. The id passed through the /cgi-bin/getuid interface.
y_2D_value	0-255	2D 降噪的设置的范围 2D noise reduction setting range
y_3D_value	0-255	3D 降噪的设置的范围 3D noise reduction setting range

响应的报文

Response message

状态码 Status code	内容 Content	描述 Description
200	<?xml version="1.0" encoding="UTF-8"?> <Capture TNF="128" SNF="128"></Capture>	请求成功 The request was successful.
400	<?xml version="1.0" encoding="UTF-8"?> <fault> <value>/cgi-bin/set_noise_reduction</value> >	获取参数失败 y_2D_value 的参数的范围为 0-255，其余的范围就会报错。

	<reason>2D_value: 0 ~ 255</reason> </fault>	Failed to get parameters The range of the y_2D_value is 0-255, and the rest of the range will report an error.
400	<?xml version="1.0" encoding="UTF-8"?> <fault> <value>/cgi-bin/set_noise_reduction</value> > <reason>3D_value: 0 ~ 255</reason> </fault>	获取参数失败 y_3D_value 的参数的范围为 0-255, 其余的范围就会报错。 Failed to get parameters The range of the y_3D_value parameter is 0-255, and the rest of the range will report an error.

3.29 编码码流开关设置

3.29 Encoding code stream switch setting

/cgi-bin/set_start_codec?uid=XXXXXXXX

/cgi-bin/set_start_codec?stream0_enable=1&stream1_enable=1&uid=XXXXXXXX

参数名称 Parameter name	参数值 Parameter value	描述 Description
uid		会话的用户 id, 通过/cgi-bin/getuid 接口得到的 id User id for the session. The id passed through the /cgi-bin/getuid interface.
stream0_enable	0-1	0: 主码流的编码设置关闭 1: 主码流的编码设置打开 0: The encoding setting of the main stream is off 1: the encoding setting of the main stream is on
stream1_enable	0-1	0: 子码流的编码设置关闭 1: 子码流的编码设置打开 0: The encoding setting of the substream is off 1: Encoding setting of substream is on

响应的报文

Response message

状态码 Status code	内容 Content	描述 Description
200	<?xml version="1.0" encoding="UTF-8"?> <Encode><EncodeConfig Stream="1" Enable="1"/> <EncodeConfig Stream="2" Enable="1"/>	请求成功 The request was successful.

	Enable="1"/></Encode>	
400	<?xml version="1.0" encoding="UTF-8"?> <fault> <value>/cgi-bin/set_start_codec</value> <reason>stream0_enable: 0 or 1</reason> </fault>	获取参数失败 stream0_enable 的参数的范围为 0-1, 其余的范围就会报错。 Failed to get parameters The range of the stream0_enable is 0-1, and the rest of the range will report an error.
400	<?xml version="1.0" encoding="UTF-8"?> <fault> <value>/cgi-bin/set_start_codec</value> <reason>stream1_enable: 0 or 1</reason> </fault>	获取参数失败 stream1_enable 的参数的范围为 0-1, 其余的范围就会报错。 Failed to get parameters The range of the stream1_enable parameter is 0-1, and the rest of the range will report an error.

3.30 红外灯以及亮度开关设置

3.30 Infrared light and brightness switch settings

/cgi-bin/setBrightness_InfraredLamp?uid=XXXXXXXX

/cgi-bin/setBrightness_InfraredLamp?setbrightness=1&infrared_lamp=1&uid=XXXXXXXX

参数名称 Parameter name	参数值 Parameter value	描述 Description
uid		会话的用户 id, 通过/cgi-bin/getuid 接口得到的 id User id for the session. The id passed through the /cgi-bin/getuid interface.
Led brightness	0-100	设置红外灯亮度的范围 Set the range of brightness
infrared_lamp	0-1	0: 红外灯关闭 1: 红外灯开启 0: close infrared 1: open infrared

响应的报文

Response message

状态码 Status code	内容 Content	描述 Description
200	<?xml version="1.0" encoding="UTF-8"?> <Capture led_Brightness ="100" />	请求成功 The request was successful.

	infrared_lamp="1"></Capture>	
400	<?xml version="1.0" encoding="UTF-8"?> <fault> <value>/cgi-bin/setBrightness_InfraredLam p</value> <reason>brightness: 0 ~ 100</reason> </fault>	获取参数失败 setbrightness 的参数的范围为 0-100, 其余的范围就会报错。 Failed to get parameters The range of the setbrightness is 0-100, and the rest of the range will report an error.
400	<?xml version="1.0" encoding="UTF-8"?> <fault> <value>/cgi-bin/setBrightness_InfraredLam p</value> <reason>infrared_lamp: 0 ~ 1</reason> </fault>	获取参数失败 infrared_lamp 的参数的范围为 0-1, 其余的范围就会报错。 Failed to get parameters The range of the infrared_lamp parameter is 0-1, and the rest of the range will report an error.

3.31 服务端口开关 API

3.31 Service port switch API

```
/cgi-bin/set_service_port?uid=XXXXXXXXX
/cgi-bin/set_service_port?enable_web=1&enable_control=1&enable_rtsp=1&enable_hik=1&uid=XXXXXXXXX
/cgi-bin/set_service_port?enable_web=1&webport=80&enable_control=1&controlport=8091&enable_rtsp=1&rtspport=554&enable_hik=1&hikport=8000&uid=XXXXXXXXX
```

参数名称 Parameter name	参数值 Parameter value	描述 Description
uid		会话的用户 id, 通过/cgi-bin/getuid 接口得到的 id User id for the session. The id passed through the /cgi-bin/getuid interface.
enable_web	0-1	0: 关闭 WEB 的端口 1: 打开 WEB 的端口 0: Close WEB port 1: Open the web port
enable_control	0-1	0: 关闭 PTZ 的控制端口 1: 打开 PTZ 的控制端口 0: Close the control port of PTZ 1: Open the control port of PTZ
enable_rtsp	0-1	0: 关闭 RTSP 的端口 1: 打开 RTSP 的端口 0: Disable RTSP port 1: Open RTSP port

enable_hik	0-1	0: 关闭海康协议的端口 1: 打开海康协议的端口 0: Close the port of Haikang protocol 1: open the port of Haikang protocol
webport	1~65535	WEB 端口 WEB Port
hikport	1~65535	HIK 端口 HIK Port
rtspport	1~65535	RTSP 端口 RTSPPort
controlport	1~65535	Control 端口 Control Port

响应的报文

Response message

状态码 Status code	内容 Content	描述 Description
200	<?xml version="1.0" encoding="UTF-8"?> <MediaStreamConfig> <StreamAccess enable_web="1" enable_rtsp="1" enable_comm="1" enable_hik="1" /> </MediaStreamConfig>	请求成功 The request was successful.
400	<?xml version="1.0" encoding="UTF-8"?> <fault> <value>/cgi-bin/set_service_port</value> <reason>enable_web: 0 ~ 1</reason> </fault>	获取参数失败 enable_web 的参数的范围为 0-1, 其余的范围就会报错。 Failed to get parameters The range of the enable_web is 0-1, and the rest of the range will report an error.
400	<?xml version="1.0" encoding="UTF-8"?> <fault> <value>/cgi-bin/set_service_port</value> <reason>enable_control: 0 ~ 1</reason> </fault>	获取参数失败 enable_control 的参数的范围为 0-1, 其余的范围就会报错。 Failed to get parameters The range of the enable_control parameter is 0-1, and the rest of the range will report an error.
400	<?xml version="1.0" encoding="UTF-8"?> <fault> <value>/cgi-bin/set_service_port</value> <reason>enable_rtsp: 0 ~ 1</reason> </fault>	获取参数失败 enable_rtsp 的参数的范围为 0-1, 其余的范围就会报错。 Failed to get parameters

		The range of the enable_rtsp parameter is 0-1, and the rest of the range will report an error.
400	<?xml version="1.0" encoding="UTF-8"?> <fault> <value>/cgi-bin/set_service_port</value> <reason>enable_hik: 0 ~ 1</reason> </fault>	获取参数失败 enable_hik 的参数的范围为 0-1，其余的范围就会报错。 Failed to get parameters The range of the enable_hik parameter is 0-1, and the rest of the range will report an error.

3.32 设置隐私区域 API

3.32 Service Set privacy zone API

/cgi-bin/set_privacy_zone?uid=XXXXXXXX
 /cgi-bin/set_privacy_zone?Mask1Height=1&Mask1width=1&Mask1xPos=1&Mask1yPos=1&uid=X
 XXXXXXXX

隐私设置区域总共提供 4 个区域选择。

分别为顶点的 X 坐标，Y 坐标，隐私区域的宽，隐私区域的高。

参数分别为：

第一个隐私区域：

1、Mask1Height, 2、Mask1width, 3、Mask1xPos, 4、Mask1yPos

第二个隐私区域：

1、Mask2Height, 2、Mask2width, 3、Mask2xPos, 4、Mask2yPos

第三个隐私区域：

1、Mask3Height, 2、Mask3width, 3、Mask3xPos, 4、Mask3yPos

第四个隐私区域：

1、Mask4Height, 2、Mask4width, 3、Mask4xPos, 4、Mask4yPos

参数名称 Parameter name	参数值 Parameter value	描述 Description
uid		会话的用户 id，通过/cgi-bin/getuid 接口得到的 id User id for the session. The id passed through the /cgi-bin/getuid interface.
Mask1Height	int	第一个隐私区域的高度 Height of the first privacy zone
Mask1width	int	第一个隐私区域的宽度 The width of the first privacy zone
Mask1xPos	Int	第一个隐私区域的顶点 X 坐标 Vertex X coordinate of the first privacy region
Mask1yPos	int	第一个隐私区域的顶点 Y 坐标 Vertex Y coordinate of the first privacy region

响应的报文

Response message

状态码 Status code	内容 Content	描述 Description
200	<?xml version="1.0" encoding="UTF-8"?> <Mask>OK</Mask>	请求成功 The request was successful.
400	<?xml version="1.0" encoding="UTF-8"?> <fault> <value>/cgi-bin/set_privacy_zone</value> <reason>mainStreamMask_Height is none</reason> </fault>	获取参数失败 隐私遮挡的区域的高度设置非法值，不是有效值。 Failed to get parameters The height of the privacy masked area is set to an illegal value, not a valid value.
400	<?xml version="1.0" encoding="UTF-8"?> <fault> <value>/cgi-bin/set_privacy_zone</value> <reason>mainStreamMask_Width is none</reason> </fault>	获取参数失败 隐私遮挡的区域的宽度设置非法值，不是有效值。 Failed to get parameters The Width of the privacy masked area is set to an illegal value, not a valid value.
400	<?xml version="1.0" encoding="UTF-8"?> <fault> <value>/cgi-bin/set_privacy_zone</value> <reason>mainStreamMask_xPos is none</reason> </fault>	获取参数失败 隐私遮挡的区域顶点的 X 坐标设置非法值，不是有效值。 Failed to get parameters The X coordinate of the vertex of the privacy occluded area is set to an illegal value, not a valid value.
400	<?xml version="1.0" encoding="UTF-8"?> <fault> <value>/cgi-bin/set_privacy_zone</value> <reason>mainStreamMask_yPos is none</reason> </fault>	获取参数失败 隐私遮挡的区域的顶点的 Y 坐标设置非法值，不是有效值。 Failed to get parameters The Y coordinate of the vertex of the privacy-occluded area is set to an illegal value, and is not a valid value.

3.33 图像翻转设置**3.33 set flip settings**

/cgi-bin/set_flip?uid=XXXXXXXX

/cgi-bin/set_flip?vertical_flip=1&horizon_flip=1&uid=XXXXXXXX

参数名称 Parameter name	参数值 Parameter value	描述 Description
uid		会话的用户 id，通过/cgi-bin/getuid 接口得到的 id

		User id for the session. The id passed through the /cgi-bin/getuid interface.
vertical_flip	0-1	0: 不使用垂直翻转 1: 使用垂直翻转 0: Do not use vertical flip 1: use vertical flip
horizon_flip	0-1	0: 不使用水平翻转 1: 使用水平翻转 0: Do not use horizontal flip 1: use horizontal flip

响应的报文

Response message

状态码 Status code	内容 Content	描述 Description
200	<?xml version="1.0" encoding="UTF-8"?> <Capture vertical_flip="1" horizon_flip="1"></Capture>	请求成功 The request was successful.
400	<?xml version="1.0" encoding="UTF-8"?> <fault> <value>/cgi-bin/set_flip</value> <reason>vertical_flip: 0 or 1</reason> </fault>	获取参数失败 vertical_flip 的参数的范围为 0-1, 其余的范围就会报错。 Failed to get parameters The range of the vertical_flip parameter is 0-1, and the rest of the range will report an error.
400	<?xml version="1.0" encoding="UTF-8"?> <fault> <value>/cgi-bin/set_flip</value> <reason>horizon_flip: 0 or 1</reason> </fault>	获取参数失败 horizon_flip 的参数的范围为 0-1, 其余的范围就会报错。 Failed to get parameters The range of horizon_flip parameter is 0-1, and the rest of the range will report an error.

3.34 https 证书和私钥上传

3.34 https Certificate and private key upload

详细的信息请查看 [Certificate.html](#) 文档。

使用 JS 原生表单上传形式，使用如下的 [demo](#)，将可以把 HTTPS 所需要的证书，私钥，私钥密码都上传到 IPC 的固定目录 /mnt/nand

For more information, see [Certificate.html](#).

Using the JS native form upload form, using the following demo, you can upload the certificate, private key, and private key password required by HTTPS to the fixed directory /mnt/nand of the IPC

1、Certificate.html

```
1.  <!DOCTYPE html PUBLIC "-//W3C//DTD XHTML 1.0 Transitional//EN" "http://www.w
3.org/TR/xhtml1/DTD/xhtml1-transitional.dtd">
2.  <html xmlns="http://www.w3.org/1999/xhtml">
3.  <head>
4.      <title>IP Camera</title>
5.  </head>
6.  <body>
7.  <div id="m_plugin"></div>
8.
9.  <form id="form_form_streamMediaCertificate" class="ui-form" name="f_form_st
reamMediaCertificate" action="http://192.168.2.115/WebCertificateUploadFile" m
ethod="post" target="post_frame_streamMediaCertificate" enctype="multipart/fo
rm-data">
10.     <div class="ui-form-item fn-relative">
11.         <div class="ui-form-item">
12.             <label class="ui-label fn-pad120 fn-width120" id="streamMediaCer
tificate_file_label">https 证书</label>
13.         </div>
14.         <div class="fn-left fn-relative">
15.             <div class="ui-file fn-opacity">
16.                 <input type="file" class="ui-file-box fn-opacity" name="oem_
mp3" id="streamMediaCertificate_file_audio" hidefocus="hidefocus"/>
17.             </div>
18.         </div>
19.         <input type="submit" id="streamMediaCertificate_submit" value="submi
t"/>
20.     </div>
21. </form>
22.
23. <script type="text/javascript">
24. </script>
25. </body>
26. </html>
```

3.35 自定义 OSD

3.35 UserOSD

cgi-bin/userosd?title_index=x&uid=XXXXXXXX
cgi-bin/userosd?title_index=x&enable=0&uid=XXXXXXXX
cgi-bin/userosd?title_index=x&enable=1&uid=XXXXXXXX
cgi-bin/userosd?title_index=x&title_utf8=XXXXXXXXXX&uid=XXXXXXXX
cgi-bin/userosd?title_index=x&enable=1&color=1&fontsize=1&title_pos_type=1&title_pos_x=1&title_pos_y=0&t

title_utf8=XXXXXXXXXX&uid=XXXXXXXX

参数名称 Parameter name	参数值 Parameter value	描述 Description
uid	ff2e45cd(Like this format)	会话的用户 id, 通过/cgi-bin/getuid 接口得到的 id User id for the session. The id passed through the /cgi-bin/getuid interface.
title_index	Option: 0 ~ 4	自定义 OSD 序号 UserOSD sequence number
enable	Option 0 1	1 代表开启对应序号的 UserOSD, 0 代表关闭对应序号的 UserOSD 1 Enable UserOSD, 0 Disable UserOSD
color	Option: 0x00 ~ 0xffffffff	代表 UserOSD 的颜色值。 使用 16 位 RGB 颜色值表示 Represents the color value of UserOSD. Use 16-bit RGB color value for representation
fontsize	Option 0,1,2	字体尺寸, 0 小, 1 中, 2 大 Font size. 0 Small, 1 Medium, 2 Large
title_pos_type	Option 0,1	标题位置类型, 0 方向, 1 坐标 Title position type. 0 Direction, 1 Coordinate
title_pos_x	Numbers	标题 x 轴位置 , title_pos_type=0 时取值 0 至 2 , title_pos_type=1 时取值 0 至 100 Title x-axis position. Values 0 to 2 for title_pos_type = 0 and 0 to 100 for title_pos_type = 1
title_pos_y	Numbers	标题 y 轴位置 , title_pos_type=0 时取值 0 至 2 , title_pos_type=1 时取值 0 至 100 Title x-axis position. Values 0 to 2 for title_pos_type = 0 and 0 to 100 for title_pos_type = 1
title_utf8		标题内容 按照 HTTP URL 的规范, 如果 title_utf8 的值都是字母和数字则不需要转换, 如果包含其他字符则需要转换为 utf8 编码的字符串。 例如: ipcamera title_utf8=ipcamera 你好 title_utf8=%E4%BD%A0%E5%A5%BD 你好 ipcamera title_utf8=%E4%BD%A0%E5%A5%BDipcamera

		<p>Title content</p> <p>The title_utf8 parameter specification: according to the HTTP URL specification, if the value of title_utf8 is both alphanumeric and the number does not need to be converted, if it contains other characters, it needs to be converted to a utf8 encoded string.</p> <p>For example:</p> <p>ipcamera</p> <p>title_utf8=ipcamera</p> <p>你好</p> <p>title_utf8=%E4%BD%A0%E5%A5%BD</p> <p>你好 ipcamera</p> <p>title_utf8=%E4%BD%A0%E5%A5%BDipcamera</p>
--	--	--

响应的报文

Response message

状态码 Status code	内容 Content	描述 Description
200		<p>The request was successful. The value of the parameter is:</p> <p>enable: Enable or disable OSD</p> <p>color: Color</p> <p>fontsize: Font size</p> <p>title_pos_type: Title position type</p> <p>title_pos_x: Title x-axis position</p> <p>title_pos_y: Title y-axis position</p> <p>title_utf8: Title content</p>
400	<pre><?xml version="1.0" encoding="UTF-8"?> <fault> <value>/cgi-bin/userosd</value> <reason>enable: 0 or 1</reason> </fault></pre>	<p>Parameter enable error</p> <p>(Other parameters similar to the wrong tips do not repeat the explanation)</p>

3.36 灯光控制

3.36 Led Control

cgi-bin/set_led?brightness=50&ledstatus=0&ledmode=1&uid=XXXXXXXX

参数名称 Parameter name	参数值 Parameter value	描述 Description
uid	ff2e45cd(Like this format)	会话的用户 id, 通过/cgi-bin/getuid 接口得到的 id User id for the session. The id passed through the /cgi-bin/getuid

		interface.
brightness	Option: 0 ~ 100	灯光亮度 Light brightness
ledstatus	Option 0 1	1 代表开启灯光, 0 代表关闭灯光 1: turn on the light, 0 : turn off the light
ledmode	Option: 1 or 2	表示灯光类型 1:表示红外 2:表示白光 light type 1: Indicates infrared 2: Indicates white light

响应的报文

Response message

状态码 Status code	内容 Content	描述 Description
200		The request was successful. The value of the parameter is: enable: Enable or disable OSD color: Color fontsize: Font size title_pos_type: Title position type title_pos_x: Title x-axis position title_pos_y: Title y-axis position title_utf8: Title content
400	<?xml version="1.0" encoding="UTF-8"?> <fault> <value>/cgi-bin/set_led</value> <reason>brightness: 0 ~ 100</reason> </fault>	Parameter brightness error (Other parameters similar to the wrong tips do not repeat the explanation)
400	<?xml version="1.0" encoding="UTF-8"?> <fault> <value>/cgi-bin/set_led</value> <reason>not find param brightness</reason> </fault>	Parameter brightness not found (Other parameters similar to the wrong tips do not repeat the explanation)

3.37 IRCUT 控制

3.37 IRCUT Control

cgi-bin/set_ircut?ircutmode=1&uid=XXXXXXXX

参数名称 Parameter name	参数值 Parameter value	描述 Description
-------------------------------	-------------------------------	--------------------------

uid	ff2e45cd(Like this format)	会话的用户 id, 通过/cgi-bin/getuid 接口得到的 id User id for the session. The id passed through the /cgi-bin/getuid interface.
ircutmode	Option: 0 ~ 5	Ircut 模式 UserOSD sequence number
time	Option: day or night	时间段, 取值为 day or night, 当 ircutmode 为 3 时, 也就是手动模式, 字段 time 必须带上 Time: the value is day or night, when ircutmode is 3, that is, manual mode, the field time must be brought.

响应的报文

Response message

状态码 Status code	内容 Content	描述 Description
200		The request was successful. The value of the parameter is: enable: Enable or disable OSD color: Color fontsize: Font size title_pos_type: Title position type title_pos_x: Title x-axis position title_pos_y: Title y-axis position title_utf8: Title content
400	<?xml version="1.0" encoding="UTF-8"?> <fault> <value>/cgi-bin/set_led</value> <reason>ircutmode: 0 ~ 5</reason> </fault>	Parameter ircutmode error (Other parameters similar to the wrong tips do not repeat the explanation)
400	<?xml version="1.0" encoding="UTF-8"?> <fault> <value>/cgi-bin/set_led</value> <reason>not find param time</reason> </fault>	Parameter time not found (Other parameters similar to the wrong tips do not repeat the explanation)
400	<?xml version="1.0" encoding="UTF-8"?> <fault> <value>/cgi-bin/set_led</value> <reason>error param time</reason> </fault>	Parameter time error (Other parameters similar to the wrong tips do not repeat the explanation)

3.38 URL skip the login**3.38 URL 跳过登录界面**

/WEBlogin?username=xxxx&password=xxxxx

参数名称 Parameter name	参数值 Parameter value	描述 Description
username	web 用户名 web username	
password	web 密码 web password	

3.39 Set UID valid time**3.39 设定 UID 有效时间**

/cgi-bin/setUidValidTime?validTime=80&uid=xxxxxx

参数名称 Parameter name	参数值 Parameter value	描述 Description
uid	ff2e45cd(Like this format)	会话的用户 id, 通过/cgi-bin/getuid 接口得到的 id User id for the session. The id passed through the /cgi-bin/getuid interface.
validTime	Option: >0	表示设定当前 uid 的有效时间, 单位: 秒, 当前 uid 默认有效时间是 60 秒 Indicates the effective time of setting the current uid, unit: second, the default effective time of the current uid is 60 seconds

响应的报文

Response message

状态码 Status code	内容 Content	描述 Description
200	<?xml version="1.0" encoding="UTF-8"?><SetUidValidTime>Uid valid time is 60 sec</SetUidValidTime>	请求成功 The request was successful.
400		Parameter time error (Other parameters similar to the wrong tips do not repeat the explanation)

3.40 Manually trigger io input alarm**3.40 手动触发 io 输入告警**

/cgi-bin/setManualInputAlarm?uid=xxxxxx

参数名称 Parameter name	参数值 Parameter value	描述 Description
uid	ff2e45cd(Like this format)	会话的用户 id, 通过/cgi-bin/getuid 接口得到的 id User id for the session. The id passed through the /cgi-bin/getuid interface.

响应的报文

Response message

状态码 Status code	内容 Content	描述 Description
200	<?xml version="1.0" encoding="UTF-8"?> <ManualInputAlarm>successful</ManualInputAlarm>	请求成功 The request was successful.
400		Parameter time error (Other parameters similar to the wrong tips do not repeat the explanation)

3.41 onvif authentication settings

3.41 onvif 认证设置

/cgi-bin/onvif?onvif_auth=1&uid=xxxxxx

参数名称 Parameter name	参数值 Parameter value	描述 Description
uid		会话的用户 id, 通过/cgi-bin/getuid 接口得到的 id User id for the session. The id passed through the /cgi-bin/getuid interface.
enable	0-1	0: 关闭 onvif 认证 1: 打开 onvif 认证 0: Disable onvif auth 1: Open onvif auth

响应的报文

Response message

状态码 Status code	内容 Content	描述 Description
200	<?xml version="1.0" encoding="UTF-8"?> <OnvifConfig onvif_auth="1"/>	请求成功 The request was successful.

400	<?xml version="1.0" encoding="UTF-8"?> <fault> <value>/cgi-bin/onvif </value> <reason>onvif_auth: 0 or 1 </reason>	Parameter time error (Other parameters similar to the wrong tips do not repeat the explanation)
-----	---	--

3.42 rtsp authentication settings

3.42 rtsp 认证设置

/cgi-bin/rtsp?rtsp_auth=1&uid=xxxxxxx

参数名称 Parameter name	参数值 Parameter value	描述 Description
uid		会话的用户 id, 通过/cgi-bin/getuid 接口得到的 id User id for the session. The id passed through the /cgi-bin/getuid interface.
enable	0-1	0: 关闭 rtsp 认证 1: 打开 rtsp 认证 0: Disable rtsp auth 1: Open rtsp auth

响应的报文

Response message

状态码 Status code	内容 Content	描述 Description
200	<?xml version="1.0" encoding="UTF-8"?> <RtspConfig rtsp_auth="1"/>	请求成功 The request was successful.
400	<?xml version="1.0" encoding="UTF-8"?> <fault> <value>/cgi-bin/rtsp </value> <reason> rtsp_auth: 0 or 1 </reason>	Parameter time error (Other parameters similar to the wrong tips do not repeat the explanation)

3.43 Get the position status of the relay

3.43 获取继电器的位置状态

/cgi-bin/getRelayStatus? uid=xxxxxxx

参数名称 Parameter name	参数值 Parameter value	描述 Description
------------------------	------------------------	-------------------

uid	ff2e45cd(Like this format)	会话的用户 id, 通过/cgi-bin/getuid 接口得到的 id User id for the session. The id passed through the /cgi-bin/getuid interface.
-----	----------------------------	---

响应的报文

Response message

状态码 Status code	内容 Content	描述 Description
200	<?xml version="1.0" encoding="UTF-8"?> <RelayStatus>status=1</RelayStatus>	请求成功 The request was successful.
400	<?xml version="1.0" encoding="UTF-8"?> <RelayStatus>Get status(0) fail</RelayStatus>	Parameter time error (Other parameters similar to the wrong tips do not repeat the explanation)

3.44 Set the position state of the relay

3.44 设置继电器的位置状态

/cgi-bin/setRelayStatus? status=0& uid=xxxxxxx

参数名称 Parameter name	参数值 Parameter value	描述 Description
uid	ff2e45cd(Like this format)	会话的用户 id, 通过/cgi-bin/getuid 接口得到的 id User id for the session. The id passed through the /cgi-bin/getuid interface.
status	0-1	0: 断开 1: 闭合 0: open 1: close

响应的报文

Response message

状态码 Status code	内容 Content	描述 Description
200	<?xml version="1.0" encoding="UTF-8"?> <RelayStatus> set status=1</RelayStatus>	请求成功 The request was successful.
400		Parameter time error (Other parameters similar to the wrong tips do not repeat the explanation)

3.44 Set manual shutter speed

3.44 设置手动快门速度

/cgi-bin/setShutterSpeed?

dayShutterMode=x&dayShutterSpeed=xxx&nightShutterMode=x&nightShutterSpeed=xxx&uid=x
xxxxxx

参数名称 Parameter name	参数值 Parameter value	描述 Description
uid	ff2e45cd(Like this format)	会话的用户 id, 通过/cgi-bin/getuid 接口得到的 id User id for the session. The id passed through the /cgi-bin/getuid interface.
dayShutterMode	白天快门模式: 0-1 Day Shutter Mode: 0-1	0: 自动 1: 手动 0: auto 1: manual
dayShutterSpeed	10 - 10000	Day Shutter Mode
nightShutterMode	夜晚快门模式: 0-1 Night Shutter Mode: 0-1	0: 自动 1: 手动 0: auto 1: manual
nightShutterSpeed	10 - 10000	夜晚快门速度 Night Shutter Mode

响应的报文

Response message

状态码 Status code	内容 Content	描述 Description
200	<?xml version="1.0" encoding="UTF-8"?> <setShutterSpeed>Set dayShutterMode=1, dayShutterSpeed=100, nightShutterMode=1, nightShutterSpeed=100</setShutterSpeed>	请求成功 The request was successful.
400	<?xml version="1.0" encoding="UTF-8"?> <fault> <value>/cgi-bin/setShutterSpeed </value> <reason> dayShutterMode: 0 or 1 </reason>	Parameter time error (Other parameters similar to the wrong tips do not repeat the explanation)
400	<?xml version="1.0" encoding="UTF-8"?>	Parameter time error

	<fault> <value>/cgi-bin/setShutterSpeed </value> <reason>dayShutterSpeed: 10 or 10000</reason>	(Other parameters similar to the wrong tips do not repeat the explanation)
400	<?xml version="1.0" encoding="UTF-8"?> <fault> <value>/cgi-bin/setShutterSpeed </value> <reason>nightShutterMode: 0 or 1 </reason>	Parameter time error (Other parameters similar to the wrong tips do not repeat the explanation)
400	<?xml version="1.0" encoding="UTF-8"?> <fault> <value>/cgi-bin/setShutterSpeed </value> <reason> nightShutterSpeed: : 10 or 10000 </reason>	Parameter time error (Other parameters similar to the wrong tips do not repeat the explanation)

3.45 Set device OEM model

3.45 设置设备 OEM 型号

/cgi-bin/setDeviceName?deviceName=xxxxxxx&uid=xxxxxx

参数名称 Parameter name	参数值 Parameter value	描述 Description
uid	ff2e45cd(Like this format)	会话的用户 id, 通过/cgi-bin/getuid 接口得到的 id User id for the session. The id passed through the /cgi-bin/getuid interface.
deviceName	OEM 设备型号 OEM device model	

响应的报文

Response message

状态码 Status code	内容 Content	描述 Description
200	<?xml version="1.0" encoding="UTF-8"?> <setDeviceName>Set device name(xxxxx) successful!</setDeviceName>	请求成功 The request was successful.
400	<?xml version="1.0" encoding="UTF-8"?> <fault> <value>/cgi-bin/setDeviceName </value>	Parameter time error (Other parameters similar to the wrong tips do not repeat the explanation)

	<reason>set device name failed! </reason>	
--	---	--

3.35 设置自定义 OSD (只设置不保存)

3.35 UserOSD(Only set without saving)

/cgi-bin/setUserOsdOnly?enable=1&fontsize=1&title_pos_type=0&title_pos_x=1&title_pos_y=0&title_utf8=1236
66&uid=XXXXXXXX

参数名称 Parameter name	参数值 Parameter value	描述 Description
uid	ff2e45cd(Like this format)	会话的用户 id, 通过/cgi-bin/getuid 接口得到的 id User id for the session. The id passed through the /cgi-bin/getuid interface.
enable	Option 0 1	1 代表开启对应序号的 UserOSD, 0 代表关闭对应序号的 UserOSD 1 Enable UserOSD, 0 Disable UserOSD
fontsize	Option 0,1,2	字体尺寸, 0 小, 1 中, 2 大 Font size. 0 Small, 1 Medium, 2 Large
title_pos_type	Option 0,1	标题位置类型, 0 方向, 1 坐标 Title position type. 0 Direction, 1 Coordinate
title_pos_x	Numbers	标题 x 轴位置 , title_pos_type=0 时取值 0 至 2 , title_pos_type=1 时取值 0 至 100 Title x-axis position. Values 0 to 2 for title_pos_type = 0 and 0 to 100 for title_pos_type = 1
title_pos_y	Numbers	标题 y 轴位置 , title_pos_type=0 时取值 0 至 2 , title_pos_type=1 时取值 0 至 100 Title x-axis position. Values 0 to 2 for title_pos_type = 0 and 0 to 100 for title_pos_type = 1
title_utf8		标题内容 按照 HTTP URL 的规范, 如果 title_utf8 的值都是字母和数字则不需要转换, 如果包含其他字符则需要转换为 utf8 编码的字符串。 例如: ipcamera title_utf8=ipcamera 你好

		<p>title_utf8=%E4%BD%A0%E5%A5%BD 你好 ipcamera title_utf8=%E4%BD%A0%E5%A5%BDipcamera</p> <p>Title content The title_utf8 parameter specification: according to the HTTP URL specification, if the value of title_utf8 is both alphanumeric and the number does not need to be converted, if it contains other characters, it needs to be converted to a utf8 encoded string. For example: ipcamera title_utf8=ipcamera 你好 title_utf8=%E4%BD%A0%E5%A5%BD 你好 ipcamera title_utf8=%E4%BD%A0%E5%A5%BDipcamera</p>
--	--	---

响应的报文

Response message

状态码 Status code	内容 Content	描述 Description
200		<p>The request was successful. The value of the parameter is:</p> <p>enable: Enable or disable OSD color: Color fontsize: Font size title_pos_type: Title position type title_pos_x: Title x-axis position title_pos_y: Title y-axis position title_utf8: Title content</p>
400	<pre><?xml version="1.0" encoding="UTF-8"?> <fault> <value>/cgi-bin/userosd</value> <reason>enable: 0 or 1</reason> </fault></pre>	<p>Parameter enable error (Other parameters similar to the wrong tips do not repeat the explanation)</p>

3.36 通过回环端口获取用户密码

3.36 Obtain the user password through the loopback port

/cgi-bin/getCurrentUserAccount

/cgi-bin/getCurrentUserAccount? uid=XXXXXXXXXX

响应的报文

Response message

状态码 Status code	内容 Content	描述 Description
200	<?xml version="1.0" encoding="UTF-8"?> <UsernamePassword>username=admin, password=123456</UsernamePassword>	请求成功 The request was successful.
400	<?xml version="1.0" encoding="UTF-8"?> <fault> <UsernamePassword>Get username password failed!!!</UsernamePassword>	Parameter time error (Other parameters similar to the wrong tips do not repeat the explanation)

3.37 设置向回环端口中发送告警消息

3.37 Set to send alarm message to loopback port

/cgi-bin/setSendAlarmMsgEnable?enable=1&uid=XXXXXXXX

参数名称 Parameter name	参数值 Parameter value	描述 Description
uid	ff2e45cd(Like this format)	会话的用户 id, 通过/cgi-bin/getuid 接口得到的 id User id for the session. The id passed through the /cgi-bin/getuid interface.
enable	Value: 0~1	0:关闭 1:启用

响应的报文

Response message

状态码 Status code	内容 Content	描述 Description
200	<?xml version="1.0" encoding="UTF-8"?> <SendAlarm enable=1"/>	请求成功 The request was successful.
400	<?xml version="1.0" encoding="UTF-8"?> <fault> <value>/cgi-bin/setSendAlarmMsgEna ble </value>	Parameter time error (Other parameters similar to the wrong tips do not repeat the explanation)

	<reason>alarm enable: 0 or 1 </reason>	
--	--	--

3.38 微调聚焦

3.38 Fine focus

/cgi-bin/focus_slight_ctrl?setfocus=1&uid=XXXXXXXX

参数名称 Parameter name	参数值 Parameter value	描述 Description
uid	ff2e45cd(Like this format)	会话的用户 id, 通过/cgi-bin/getuid 接口得到的 id User id for the session. The id passed through the /cgi-bin/getuid interface.
setfocus	Value: -1 or 1	-1: 远焦 (focus far) 1: 近焦 (focus near)

响应的报文

Response message

状态码 Status code	内容 Content	描述 Description
200	<?xml version="1.0" encoding="UTF-8"?> <ptz_ctrl>true</ptz_ctrl>	请求成功 The request was successful.
400	<?xml version="1.0" encoding="UTF-8"?> <fault> <value>/cgi-bin/focus_slight_ctrl </value> <reason> error, parse parameters </reason>	Parameter time error (Other parameters similar to the wrong tips do not repeat the explanation)

近焦 (focus near)

/cgi-bin/ptz_ctrl?focus=1&uid=XXXXXXXX

远焦 (focus far)

/cgi-bin/ptz_ctrl?focus=-1&uid=XXXXXXXX

4. 使用 XMLHttpRequest 调用 WEB 服务器的 CGI 程序

4. Using XMLHttpRequest to call CGI program of web server

以获得 IPC 设备的 uid 程序为例子写的一个调用程序。

JS 调用的程序实例代码:

```
1. function timestamp(url){  
2.     // var getTimestamp=Math.random();  
3.     var getTimestamp=new Date().getTime();  
4.     if(url.indexOf("?")>-1){  
5.         url=url+"&xtamp="+getTimestamp  
6.     }else{  
7.         url=url+"?timestamp="+getTimestamp  
8.     }  
9.     return url;  
10. }  
11.  
12. function inner__getuid()  
13. {  
14.     var XMLHttpRequest = null;  
15.     try{  
16.         if (window.XMLHttpRequest) {  
17.             XMLHttpRequest = new XMLHttpRequest();  
18.         }  
19.         else if (window.ActiveXObject) {  
20.             XMLHttpRequest = new ActiveXObject("Microsoft.XMLHTTP");  
21.         }  
22.     }  
23.     var szPort = window.location.port;  
24.     var szProtocol = window.location.protocol;  
25.     var szHostname = window.location.hostname;  
26.  
27.     //先得出 UID 的值  
28.     var g_des_userid_test = des("WebLogin", hexToString(g_des_userid), 0,  
    0);  
29.     var g_des_passwd_test = des("WebLogin", hexToString(g_des_passwd), 0,  
    0);  
30.  
31.     //去掉字符串中：中文，英文和数字以外的字符。  
32.     var re=/[^\\u4e00-\\u9fa5a-zA-Z0-9]/g;  
33.     g_des_userid_test = g_des_userid_test.replace(re,"");  
34.     g_des_passwd_test = g_des_passwd_test.replace(re,"");  
35.  
36.     var szUrl = szProtocol+ "//" + szHostname + ":" + szPort + "/cgi-bin  
/getuid?username="+g_des_userid_test+"&password="+g_des_passwd_test;
```

```
37.  
38.    //增加时间戳，兼容 IE 浏览器  
39.    xmlhttpRequest.open("GET", timestamp(szUrl), false);  
40.    xmlhttpRequest.send(null);  
41.    if(xmlHttpRequest.readyState==4)  
42.    {  
43.        if(xmlHttpRequest.status==200) {  
44.            var xml = xmlLoadText(xmlHttpRequest.responseText);  
45.            //这个就是提取 xml 里面的数据的函数  
46.            var uid = xml.getElementsByTagName("uid")[0].childNodes[0].n  
odeValue;  
47.        }  
48.    else  
49.    {  
50.        uid = 0;  
51.    }  
52.    }  
53.}  
54. catch(e)  
55. {  
56.    uid = 0;  
57.}  
58. return uid;  
59.}
```